

Jabra Speak2 75



Say hello to a more sustainable product

IT products are associated with a wide range of sustainability risks throughout their life cycle. Human rights violations are common in the factories. Harmful substances are used both in products and their manufacture. Products can often have a short lifespan because of poor ergonomics, low quality and when they are not able to be repaired or upgraded.

This product is a better choice. It meets all the criteria in TCO Certified, the world's most comprehensive sustainability certification for IT products. Thank you for making a responsible product choice, that help drive progress towards a more sustainable future!

Criteria in TCO Certified have a life-cycle perspective and balance environmental and social responsibility. Conformity is verified by independent and approved verifiers that specialize in IT products, social responsibility or other sustainability issues. Verification is done both before and after the certificate is issued, covering the entire validity period. The process also includes ensuring that corrective actions are implemented in all cases of factory non-conformities. And last but not least, to make sure that the certification and independent verification is accurate, both TCO Certified and the verifiers are reviewed regularly.

Want to know more?

Read information about TCO Certified, full criteria documents, news and updates at [tcocertified.com](https://www.tcocertified.com). On the website you'll also find our Product Finder, which presents a complete, searchable listing of certified products.

Equipment



1x Long-shaft
screwdriver
(T8H)

 


1x Electrostatic
Discharge (ESD)
safe tweezers
(optional)




1x Spudger

Replacement components



Battery

 Part number:
[26-03679](#)



Silicone ring

Part number:
[07-10617](#)




Product label


Part number:
[80-05644](#)

Ensure you have the replacement parts before starting disassembly.


1. Power on the speakerphone to identify the following 3 areas with a marker or sticker. These areas must be avoided when prying off the top cover during step 9.

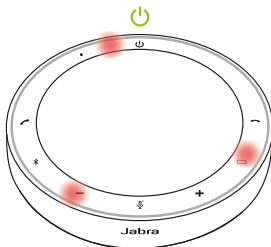


2. Power off the speakerphone.

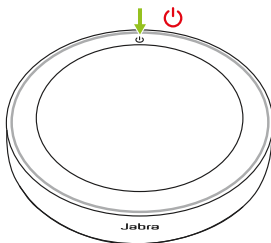

3. Flip the speakerphone over. Use a spudger to remove the silicone ring from the bottom of the speakerphone.

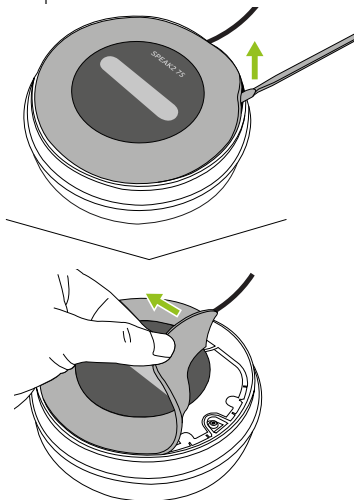


4. Remove the product label.

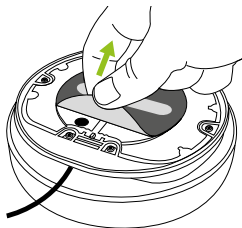


Carefully store the silicone ring and product label so they can be replaced after battery replacement.


5. Remove all 6 screws.

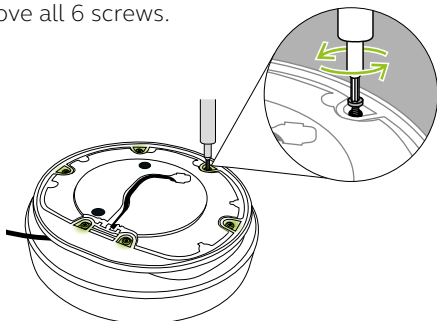


6. Remove the plastic ring.

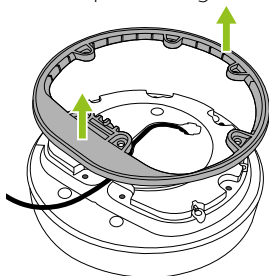


7. Use tweezers to remove the 2 screw plugs to reveal the screws underneath.

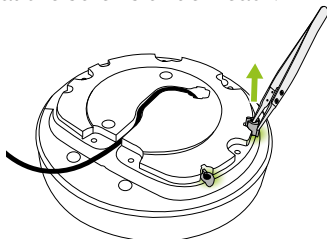


8. Remove all 10 screws.

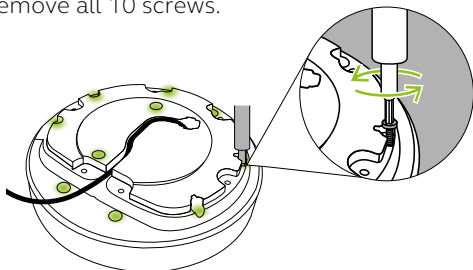


9. Flip the speakerphone over. Use a spudger to remove the top cover. Do not pry the cover in the three marked areas of the speakerphone.

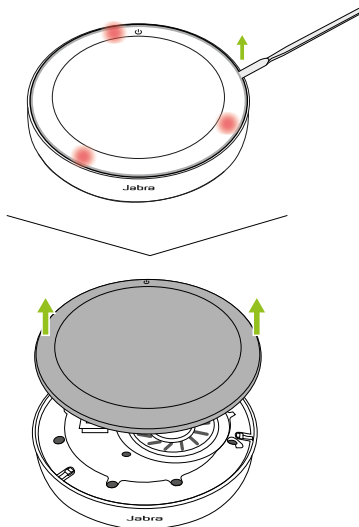

10. Carefully open the 3 hinged latches on each FPC connector using the tweezers.

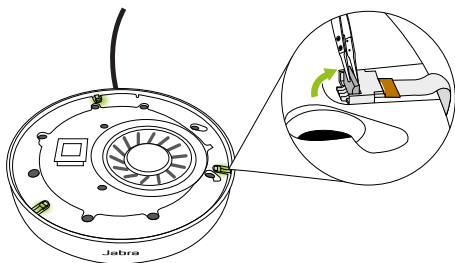


11. Disconnect the 3 FPC connectors by gently pulling the cable outwards, keeping it low and flat.

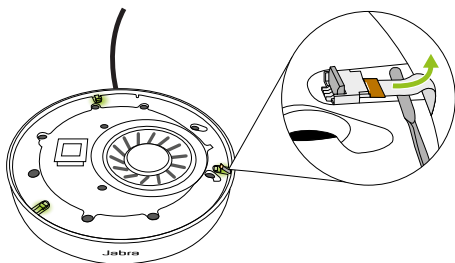


12. Flip the speakerphone upside down and carefully lift one side of the outer case to reveal the battery.

WARNING!


The outer case is still connected by 2 cables. Do not sever these connections as it may damage the speakerphone.

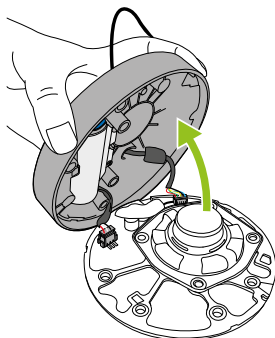


13. Disconnect the battery connector.

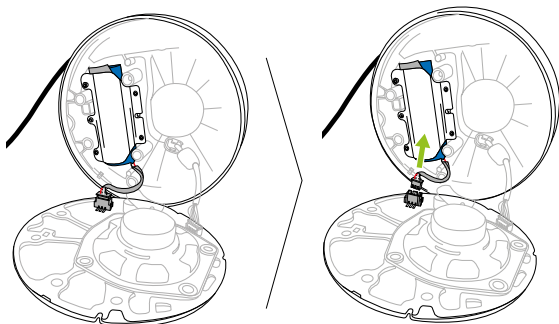

14. Remove all 4 screws.

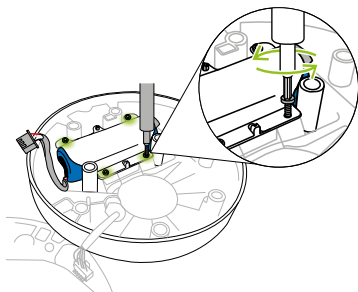


15. Remove the battery cover and then the battery.

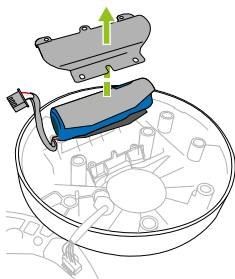


Check your local regulations regarding proper battery disposal requirements and dispose of the used battery in accordance with any/all applicable laws.


16. Insert the replacement battery into the outer case. Replace all 4 screws.

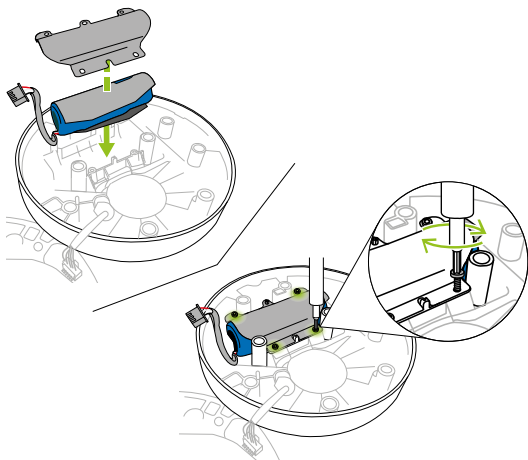

17. Connect the battery connector.

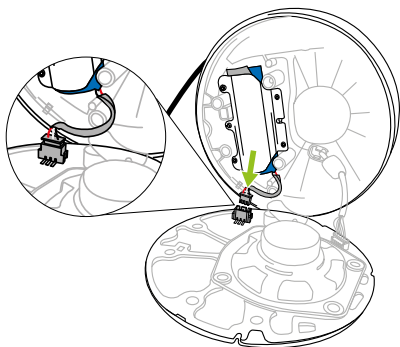


18. Ensure the 3 FPC connectors are pointing upwards. Align and place the speaker housing in the outer case. Ensure the 3 FPC connectors are visible above the edge of the outer case and then gently push down on the speaker housing to secure.

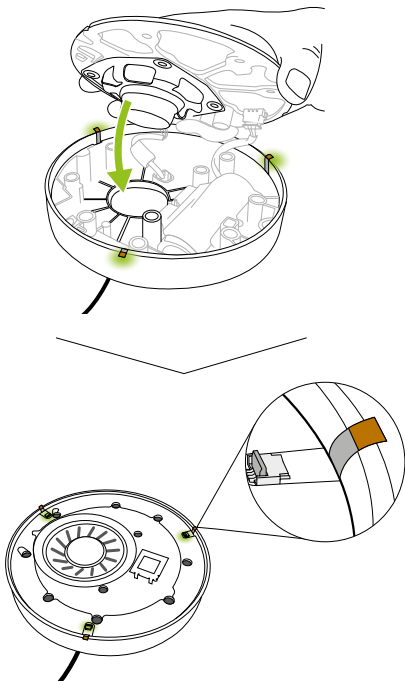


19. Reconnect the 3 FPC connectors by sliding them into place until the line on the flex PCB aligns with the end of each connector.

WARNING!


Do not pull on the 3 FPC connectors too hard as they may get damaged.

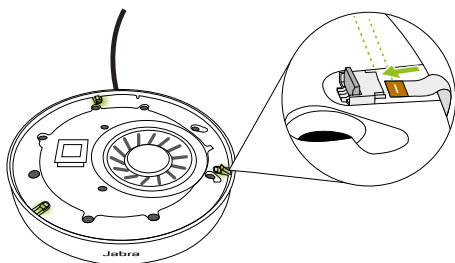


19. Close the hinged latches on each of the 3 FPC connectors.

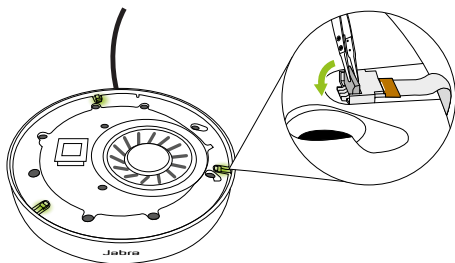


20. To replace the speaker cover, align the power icon with the charging cable and gently press down.

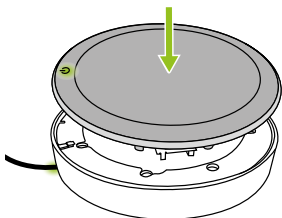

21. Flip the speakerphone over and replace all 10 screws. Reinsert the 2 screw plugs and route the charging cable through the cable channel.

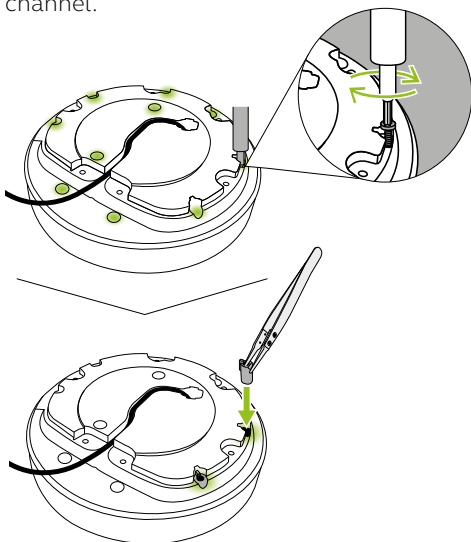

22. Align the plastic foot and replace all 6 screws.

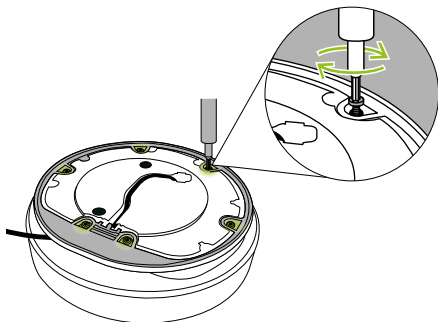

23. Replace the silicone ring and product label.

