


Jabra Motion UC With Travel And Charge Kit

How do I reset my Jabra Motion?

When you reset your Jabra Motion, the list of devices that have been paired with it is cleared. Follow these steps to reset:

1. Close the flip boom arm on your Jabra Motion.
2. Open the flip boom arm, and simultaneously press and hold the **Call** button and the **Voice** button for 10 seconds.
3. When the battery indicator turns purple, release the buttons. The battery indicator flashes 3 times to indicate that your Jabra Motion has been reset, and is ready to pair again.

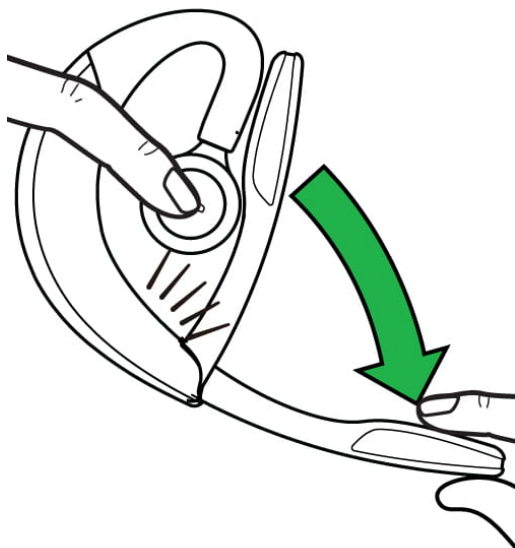

If you hold the buttons too long, repeat steps 1-3.

Note: When your Jabra Motion has been reset, you will need to re-pair it with your mobile phone. Remember to delete the previous pairing before you re-pair.