

Jabra Engage 45 SE - Convertible

Why does the headset turn off after 30 minutes when it has not been moved, docked, or used?

To conserve battery, the headset will automatically turn off when it has not been docked for 30 minutes, moved, or used.

To end the Power Nap, either move the headset (the headset has built-in motion sensors), press any button on the headset, or dock the headset in the base.

You can turn off/on the Power Nap setting using Jabra Direct.

Applicable products



Jabra Engage 55 -
USB-A MS Mono with



Jabra Engage 55 -
USB-A MS Stereo



Jabra Engage 55 -
USB-A MS



Jabra Engage 55 -
USB-A MS Mono



Jabra Engage 55 -
USB-A MS Stereo



Jabra Engage 55 -
USB-A UC



Jabra Engage 55 -
USB-A UC Stereo with



Jabra Engage 55 -
USB-A UC Mono with



Jabra Engage 55 -
USB-A UC Stereo



Jabra Engage 55 -
USB-C MS



Jabra Engage 55 -
USB-A UC Mono



Jabra Engage 55 -
USB-C MS Mono



Jabra Engage 55 -
USB-C MS Mono with



Jabra Engage 55 -
USB-C MS Stereo with



Jabra Engage 55 -
USB-C UC Mono



Jabra Engage 55 -
USB-C UC Stereo with



**Jabra Engage 55 -
USB-C UC Mono with**



**Jabra Engage 65
Mono**



**Jabra Engage 55 -
USB-C UC Convertible**



**Jabra Engage 65
Convertible**



**Jabra Engage 55 -
USB-C MS Stereo**



**Jabra Engage 55 -
USB-C UC Stereo**



**Jabra Engage 65
Stereo**



**Jabra Engage 75
Convertible**



**Jabra Engage 75
Mono**



**Jabra Engage 75
Stereo**



**Jabra Engage 75 SE -
Stereo**



**Jabra Engage 75 SE -
Convertible**



**Jabra Engage 75 SE -
Mono**



**Jabra Engage 45 SE -
Convertible**



**Jabra Engage 45 SE -
Mono**



**Jabra Engage 45 SE -
Stereo**



**Jabra Engage 65 SE -
Convertible**



**Jabra Engage 65 SE -
Stereo**

**Jabra Engage 55 SE -
USB-A MS**



**Jabra Engage 55 SE -
USB-A MS Mono**

**Jabra Engage 55 SE -
USB-A MS Mono**



**Jabra Engage 55 SE -
USB-A MS Stereo**

**Jabra Engage 65 SE -
Mono**



**Jabra Engage 55 SE -
USB-A MS Stereo**



**Jabra Engage 55 SE -
USB-A UC Mono**



**Jabra Engage 55 SE -
USB-A UC Mono**



**Jabra Engage 55 SE -
USB-A UC**



**Jabra Engage 55 SE -
USB-A UC Stereo**



**Jabra Engage 55 SE -
USB-A UC Stereo**



**Jabra Engage 55 SE -
USB-C MS**



**Jabra Engage 55 SE -
USB-C MS Mono**



**Jabra Engage 55 SE -
USB-C MS Stereo**



**Jabra Engage 55 SE -
USB-C MS Mono**



**Jabra Engage 55 SE -
USB-C UC Convertible**



**Jabra Engage 55 SE -
USB-C UC Mono**



**Jabra Engage 55 SE -
USB-C UC Mono**



**Jabra Engage 55 SE -
USB-C MS Stereo**



**Jabra Engage 55 SE -
USB-C UC Stereo**



**Jabra Engage 55 SE -
USB-C UC Stereo**