

Jabra Link 850

How do I switch between a PC and a desk phone?

At the top of the Jabra Link 850 or Link 860, there is a manual switch that displays icons for a desk phone and a PC. The default setting is the desk phone mode. When you set the switch to PC mode, audio is then received and transmitted to and from the PC.

Applicable products



Jabra Link 850



Jabra Link 860