

Jabra Pro 9465 Duo

What do the tones in my Jabra Pro 9400 headset mean?

The tones in your Jabra Pro 9400 headset indicate the following:

- When wearing the headset and pressing (8-10 seconds) the **Multi-function** button, 3 ascending tones indicate the headset is on. 3 descending tones indicate the headset is off. Note that the headset turns on when you pick it up from the base.
- Headset beeps at 15 second intervals - The microphone is muted. The mute icon will also be displayed red on the base.
- Headset beeps at 20 second intervals - The battery is low.
- 3 descending tones indicate the headset is out of range and/or unable to pair with the base due to low battery level or wireless interference.

Applicable products



Jabra Pro 9450 Mono



Jabra Pro 9450 Duo



Jabra Pro 9460 Duo



Jabra Pro 9460 Mono



Jabra Pro 9470 Mono



Jabra Pro 9465 Duo