


# Jabra Solemate Max

## How do I switch between male and female voice guidance on my Jabra Solemate Max?

Follow these steps:

1. Turn off your Jabra Solemate Max.
2. Press and hold the **Skip forward** button or the **Skip backward** button while you turn on your Jabra Solemate Max.

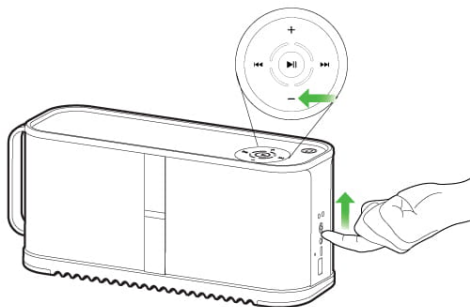

3. Release the button when you hear the voice of your choice.