

Jabra GN9330e

How to connect my Jabra GN9330e with Avaya 1408, 1416, 1608, 1616, 9404, 9408, 9504, 9508, 9608, 9610, 9611G, 9620, 9620C, 9620L, 9621G, 9630, 9630G, 9640C, 9640G, 9641G, 9650, 9650C, 9670

Prerequisite:

Jabra GN9330e + Jabra Link 14201-20

In combination with one of the following Avaya phones:

- 1408 / 1416
- 1608 / 1616
- 9404 / 9408
- 9504 / 9508
- 9608 / 9610 / 9611G / 9620 / 9620C / 9620L / 9621G
- 9630 / 9630G / 9640C / 9640G / 9641G / 9650 / 9650C / 9670

Connection:

1. Insert the supplied RJ10 to RJ10 connection cable into the socket of your Jabra GN9350e base marked "phone" and the other end into the socket of the EHS adapter marked with the "phone" symbol.
2. Now connect the end of the RJ12 to RJ12 connection cable (EHS adapter) marked in red to the socket of the EHS adapter marked with "AUX" and the socket of your Jabra GN9350e base marked with "AUX".
3. Now connect the white RJ10 to RJ10 connection cable marked with "C" to the socket of the EHS adapter marked with "Headset/Handset" and with the "headset" socket of your phone.

Important: 1408/1416 and 9404/9408 phones, use the cable marked white with "A" (instead of the "C" cable).

4. Connect the dial tone sensor with the EHS adapter and attach it to the center on the phone speaker.



Please note that full functionality is only available when all the color-marked parts of the cables are inserted into the EHS adapter. See photo.



Software setup:

Put the headset into the base and activate the “DHSG” mode.

Hold down the “phone” button on the base of the Jabra GN9330e for approx. 6 seconds until the online display (blue LED) on the headset starts to flash. The current software is displayed to you by activating the volume controller in the form of the charge display (green LED).


LEDs from left to right:

LED 1 = RHL
LED 2 = DHSG
LED 3 = AEI
LED 4 = MSH

Thereafter, you can switch into the different software modes (LED 1-4) with the "volume" controller on the headset. To confirm the software has successfully installed, the base automatically switches back to charge mode after approx. 15 seconds.

Base setup:

Set the phone setup switch (A-G) to "A".

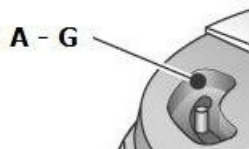

Headset answer/end:

As soon as the dial tone signal can be heard in the headset, you can answer the call by pressing the "answer/end" on the headset; by pressing again the call is ended.

