

# Jabra Pro 9450 Mono Flex

## How do I set a preferred softphone in Jabra Direct?


### Prerequisites

- [Jabra Direct - latest version](#)

If you have multiple softphones installed, you can select a preferred softphone. Follow these steps.

1. Open Jabra Direct.
2. On the left menu, click **Settings**.
3. In **Softphone Integration > Preferred Softphone**, select your preference.

If your organization has decided to manage the setting centrally, this will be indicated by a **Lock** icon.

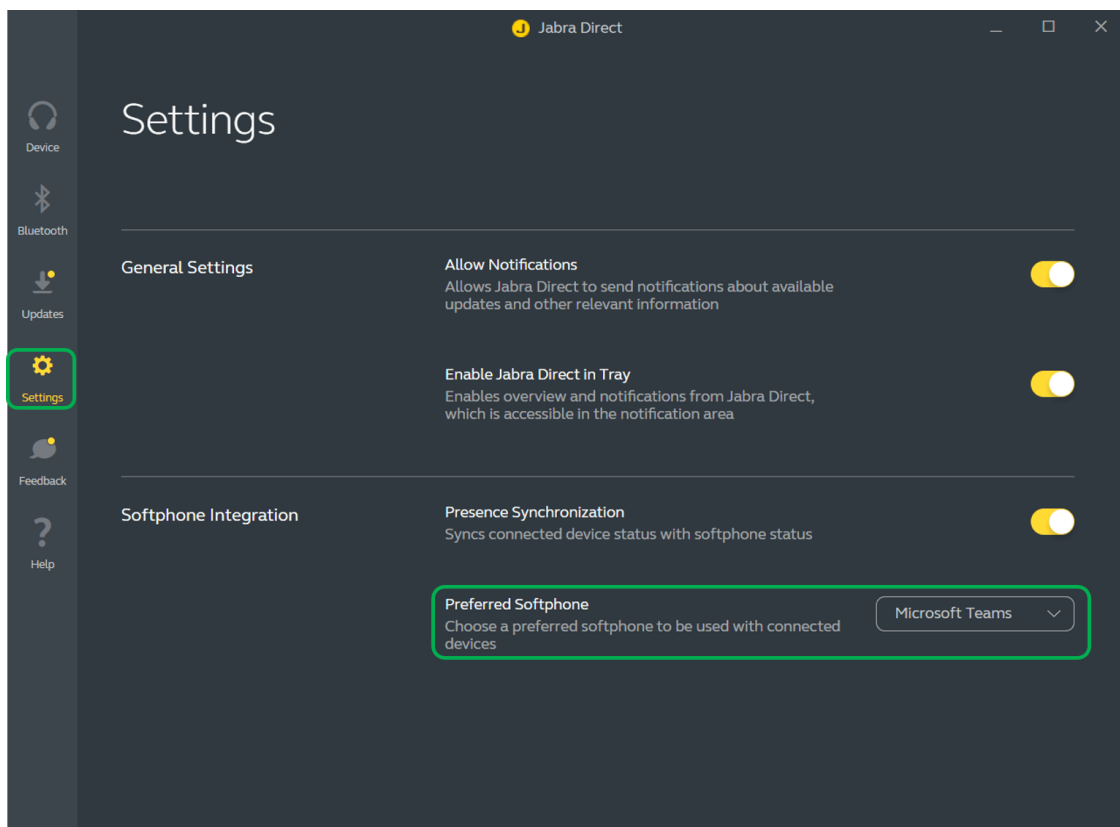

**Note**

Images and text are for guidance purposes only. Actual images and text may vary depending on the connected device and updates to the software.