


## How do I reset my Jabra Sport Coach Wireless?

When you reset your Jabra Sport Coach Wireless, the list of devices that have been paired with it is cleared. Follow these steps to reset:

1. Turn on your Jabra Sport Coach Wireless by pressing and holding the **Multi-function** button for at least 3 seconds, or until the indicator light flashes green.
2. Simultaneously press and hold the **Multi-function** button and the **Sports** button for about 5 seconds until the indicator light flashes green.

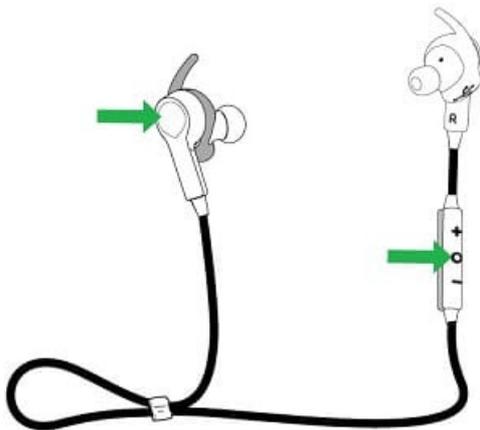

3. The Jabra Sport Coach Wireless is now reset and will go directly into pairing mode.

Note: When your Jabra Sport Coach Wireless has been reset, you will need to re-pair it with your mobile phone. Remember to delete the previous pairing before you re-pair.