

Jabra Elite 7 Pro - Black

How do I reset the charging case for my Jabra true wireless earbuds?

If the LED on the charging case does not light up when you connect the charging case to a power source, you can try resetting the charging case.

To reset the charging case, follow these steps.

1. Open the charging case and leave the lid open.
2. Connect the charging case to a power source using the supplied USB cable. The firmware for the charging case will be restarted.

Note

During this process, it does not matter if the earbuds are in the charging case or not.

Applicable products



Jabra Elite 65t -
Copper Black



Jabra Elite 65t -
Titanium Black



Jabra Elite 7 Active -
Mint



Jabra Elite 7 Active -
Navy



Jabra Elite 7 Active -
Navy (Include



Jabra Elite 7 Pro -
Black



Jabra Elite 7 Pro -
Gold Beige



Jabra Elite 7 Pro -
Titanium Black



Jabra Elite 75t -
Titanium Black



Jabra Elite 75t - Black



Jabra Elite 7 Active -
Black



Jabra Elite 85t -
Titanium Black



Jabra Elite Active 65t
- Copper Black



Jabra Elite Active 65t
- Copper Red



Jabra Elite Active 65t
- Copper Blue



Jabra Elite Active 65t
- Titanium Black



Jabra Elite Active 75t
- Navy



Jabra Elite Active 75t
- Titanium Black



Jabra Elite Sport
(Upgrade)



Jabra Elite Sport
(Lime Green Grey)



Jabra Elite 65t - Gold
Beige



Jabra Evolve 65t MS



Jabra Evolve 65t UC



Jabra Evolve2 Buds -
USB-C MS



Jabra Evolve2 Buds -
USB-A UC - Wireless



Jabra Evolve2 Buds -
USB-A MS - Wireless



Jabra Evolve2 Buds -
USB-C MS - Wireless



Jabra Evolve2 Buds -
USB-C UC



Jabra Evolve2 Buds -
USB-A UC



Jabra Evolve2 Buds -
USB-C UC - Wireless