

Jabra Sport Pace

How do I manually turn off/on voice guidance on my Jabra Sport Pace Wireless?

Voice guidance is turned on, as the default setting, on your Jabra Sport Pace Wireless.

To manually turn off/on voice guidance, follow these steps.

1. Turn off your Jabra Sport Pace Wireless by pressing and holding (5 seconds) the **Multi-function** button until the LED flashes red.
2. Simultaneously press and hold (5 seconds) the **Multi-function** button and the **Sports** button until “sound prompts on” or “sound prompts off” is announced in the headset.

