

# Jabra Speak2 75 - MS Teams - Link 380c, Dark Grey

## How do I change the audio notification type on the speakerphone using Jabra Direct?

### Prerequisites

- [Jabra Direct - latest version](#)

To change the audio notification type using Jabra Direct, follow these steps.

1. In Jabra Direct, **Device**.
2. Select your Jabra device.
3. In **Settings > Speakerphone > Audio notification type**, select from Voice or Tone.
4. Click **Save**.

## Applicable products



**Jabra Speak2 55 UC -  
Dark Grey**



**Jabra Speak2 40 - MS  
Teams, Dark Grey**



**Jabra Speak2 55 MS  
Teams - Dark Grey**



**Jabra Speak2 40 - UC,  
Dark Grey**



**Jabra Speak2 75 - MS  
Teams - Link 380a,  
Dark Grey**



**Jabra Speak2 75 - MS  
Teams - Link 380c,  
Dark Grey**



**Jabra Speak2 75 - UC -  
Link 380a, Dark Grey**



**Jabra Speak2 75 - MS  
Teams, Dark Grey**



**Jabra Speak2 75 - UC -  
Link 380c, Dark Grey**



**Jabra Speak2 75 - UC,  
Dark Grey**