


Jabra Speak 710 UC

How do I reset the Jabra speakerphone?

To reset the Jabra speakerphone, simultaneously press and hold (8 seconds) the **Answer call** button and the **End call** button until "Factory reset" is announced.

Resetting the Jabra speakerphone clears the list of paired Bluetooth devices and also clears all personalized settings. After a factory reset, it is necessary to re-pair the Jabra speakerphone with your Bluetooth devices or Jabra Link Bluetooth adapter.

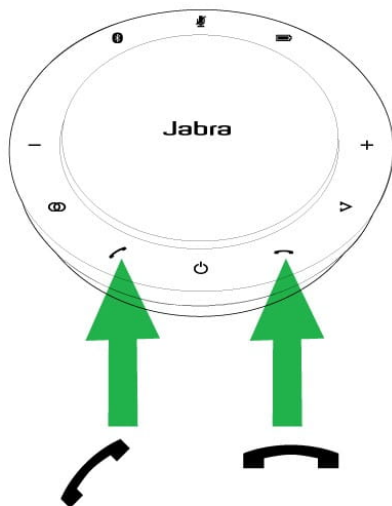

Applicable products



Jabra Speak 710 MS



Jabra Speak 710 UC



Jabra Speak 750 - UC



**Jabra Speak 750 - MS
Teams**