


Jabra Speak 710 UC

How do I link two Jabra Speak 710 speakerphones?

If two Jabra Speak 710 speakerphones are within a 2m/6ft range of each other, the **Link** button will be visible. To temporarily link the audio between them, press the **Link** button on both speakerphones. To unlink the speakerphones, press the **Link** button on one of the speakerphones.

The link will be disconnected if you turn off or enter pairing mode on one of the speakerphones. Afterward, the link does not automatically reconnect. You will need to manually reconnect using the same procedure as above.

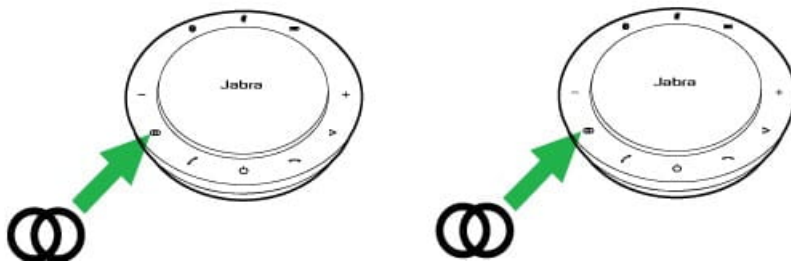

Note

If two Bluetooth devices are connected to the Jabra Speak 710, the last connected Bluetooth device will be replaced by the temporary link.