

# Jabra Engage 65 Convertible

## How do I minimize potential wireless range issues related to DECT density using Jabra Direct?


### Prerequisites

- [Jabra Direct - latest version](#)

To change the wireless range setting, follow these steps.

1. Dock the headset in the base.
2. In Jabra Direct, select your device.
3. Click **Device**.
4. In **Device settings** > **Base** > **Wireless signal range**, select your preferred setting.

The settings, **Medium** and **Short**, use lower radio frequency levels that will limit the range. This will minimize the potential for radio interference in environments with high DECT density.

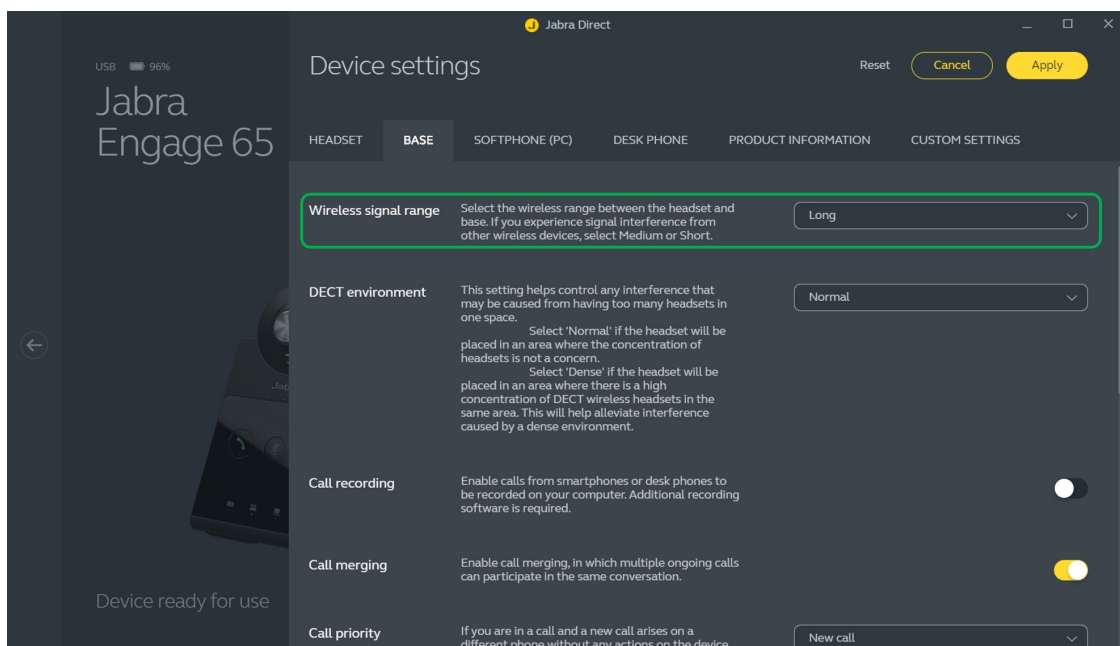

5. Click **Apply**.

It is important for all devices that are located in a specific environment to use the same settings to get the best possible density performance. For more information on deployment of wireless Jabra products and wireless density, see [Jabra Technical Whitepapers](#).

**Note**

Images and text are for guidance purposes only. Actual images and text may vary depending on the connected device and updates to the software.

## Applicable products



Jabra Engage 65  
Mono



Jabra Engage 55 -  
USB-C UC Stereo with



Jabra Engage 75  
Mono



Jabra Engage 75  
Convertible



Jabra Engage 65  
Stereo



Jabra Engage 55 -  
USB-C UC Stereo



Jabra Engage 55 -  
USB-C UC Mono with



Jabra Engage 75  
Stereo



Jabra Engage 65  
Convertible



Jabra Engage 55 -  
USB-C MS Stereo with



Jabra Engage 55 -  
USB-A UC Mono



Jabra Engage 55 -  
USB-C UC Convertible



Jabra Engage 55 -  
USB-C MS Mono with



Jabra Engage 55 -  
USB-C MS Mono



Jabra Engage 55 -  
USB-C MS Stereo



Jabra Engage 55 -  
USB-A MS Stereo



**Jabra Engage 55 -  
USB-A MS Stereo**



**Jabra Engage 55 -  
USB-C MS**



**Jabra Engage 55 -  
USB-A UC Stereo with**



**Jabra Engage 55 -  
USB-C UC Mono**



**Jabra Engage 55 -  
USB-A UC Stereo**



**Jabra Engage 55 -  
USB-A UC**



**Jabra Engage 55 -  
USB-A MS Mono**



**Jabra Engage 55 -  
USB-A MS Mono with**



**Jabra Engage 55 -  
USB-A MS**



**Jabra Engage 55 -  
USB-A UC Mono with**



**Jabra Engage 75 SE -  
Convertible**



**Jabra Engage 75 SE -  
Stereo**



**Jabra Engage 75 SE -  
Mono**



**Jabra Engage 45 SE -  
Convertible**



**Jabra Engage 45 SE -  
Mono**



**Jabra Engage 45 SE -  
Stereo**



**Jabra Engage 65 SE -  
Convertible**



**Jabra Engage 65 SE -  
Stereo**

**Jabra Engage 55 SE -  
USB-A MS**



**Jabra Engage 55 SE -  
USB-A MS Mono**

**Jabra Engage 55 SE -  
USB-A MS Mono**



**Jabra Engage 55 SE -  
USB-A MS Stereo**

**Jabra Engage 65 SE -  
Mono**



**Jabra Engage 55 SE -  
USB-A MS Stereo**



**Jabra Engage 55 SE -  
USB-A UC Mono**



**Jabra Engage 55 SE -  
USB-A UC Mono**



**Jabra Engage 55 SE -  
USB-A UC Stereo**



**Jabra Engage 55 SE -  
USB-A UC**



**Jabra Engage 55 SE -  
USB-A UC Stereo**



**Jabra Engage 55 SE -  
USB-C MS Mono**



**Jabra Engage 55 SE -  
USB-C MS Mono**



**Jabra Engage 55 SE -  
USB-C MS Stereo**



**Jabra Engage 55 SE -  
USB-C MS**



**Jabra Engage 55 SE -  
USB-C UC Convertible**



**Jabra Engage 55 SE -  
USB-C UC Mono**



**Jabra Engage 55 SE -  
USB-C MS Stereo**



**Jabra Engage 55 SE -  
USB-C UC Stereo**



**Jabra Engage 55 SE -  
USB-C UC Mono**



**Jabra Engage 55 SE -  
USB-C UC Stereo**