

Jabra Engage 65 Stereo

How do I minimize potential wireless range issues related to DECT density using Jabra Direct?


Prerequisites

- [Jabra Direct - latest version](#)

To change the wireless range setting, follow these steps.

1. Dock the headset in the base.
2. In Jabra Direct, select your device.
3. Click **Device**.
4. In **Device settings** > **Base** > **Wireless signal range**, select your preferred setting.

The settings, **Medium** and **Short**, use lower radio frequency levels that will limit the range. This will minimize the potential for radio interference in environments with high DECT density.

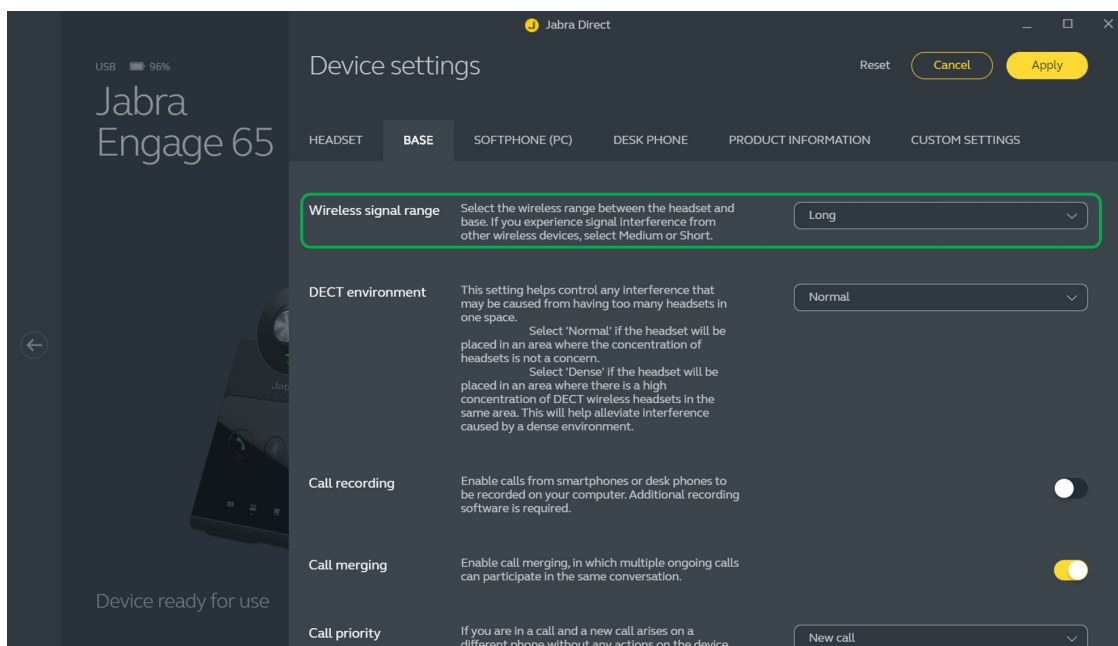

5. Click **Apply**.

It is important for all devices that are located in a specific environment to use the same settings to get the best possible density performance. For more information on deployment of wireless Jabra products and wireless density, see [Jabra Technical Whitepapers](#).

Note

Images and text are for guidance purposes only. Actual images and text may vary depending on the connected device and updates to the software.

Applicable products



Jabra Engage 65
Mono



Jabra Engage 55 -
USB-C UC Stereo with



Jabra Engage 75
Mono



Jabra Engage 75
Convertible



Jabra Engage 65
Stereo



Jabra Engage 55 -
USB-C UC Stereo



Jabra Engage 55 -
USB-C UC Mono with



Jabra Engage 75
Stereo



Jabra Engage 65
Convertible



Jabra Engage 55 -
USB-C MS Stereo with



Jabra Engage 55 -
USB-A UC Mono



Jabra Engage 55 -
USB-C UC Convertible



Jabra Engage 55 -
USB-C MS Mono with



Jabra Engage 55 -
USB-C MS Mono



Jabra Engage 55 -
USB-C MS Stereo



Jabra Engage 55 -
USB-A MS Stereo



**Jabra Engage 55 -
USB-A MS Stereo**



**Jabra Engage 55 -
USB-C MS**



**Jabra Engage 55 -
USB-A UC Stereo with**



**Jabra Engage 55 -
USB-C UC Mono**



**Jabra Engage 55 -
USB-A UC Stereo**



**Jabra Engage 55 -
USB-A UC**



**Jabra Engage 55 -
USB-A MS Mono**



**Jabra Engage 55 -
USB-A MS Mono with**



**Jabra Engage 55 -
USB-A MS**



**Jabra Engage 55 -
USB-A UC Mono with**



**Jabra Engage 75 SE -
Convertible**



**Jabra Engage 75 SE -
Stereo**



**Jabra Engage 75 SE -
Mono**



**Jabra Engage 45 SE -
Convertible**



**Jabra Engage 45 SE -
Mono**



**Jabra Engage 45 SE -
Stereo**



**Jabra Engage 65 SE -
Convertible**



**Jabra Engage 65 SE -
Stereo**

**Jabra Engage 55 SE -
USB-A MS**



**Jabra Engage 55 SE -
USB-A MS Mono**

**Jabra Engage 55 SE -
USB-A MS Mono**



**Jabra Engage 55 SE -
USB-A MS Stereo**

**Jabra Engage 65 SE -
Mono**



**Jabra Engage 55 SE -
USB-A MS Stereo**



**Jabra Engage 55 SE -
USB-A UC Mono**



**Jabra Engage 55 SE -
USB-A UC Mono**



**Jabra Engage 55 SE -
USB-A UC Stereo**



**Jabra Engage 55 SE -
USB-A UC**



**Jabra Engage 55 SE -
USB-A UC Stereo**



**Jabra Engage 55 SE -
USB-C MS Mono**



**Jabra Engage 55 SE -
USB-C MS Mono**



**Jabra Engage 55 SE -
USB-C MS Stereo**



**Jabra Engage 55 SE -
USB-C MS**



**Jabra Engage 55 SE -
USB-C UC Convertible**



**Jabra Engage 55 SE -
USB-C UC Mono**



**Jabra Engage 55 SE -
USB-C MS Stereo**



**Jabra Engage 55 SE -
USB-C UC Stereo**



**Jabra Engage 55 SE -
USB-C UC Mono**



**Jabra Engage 55 SE -
USB-C UC Stereo**