


Jabra Speak 750 - UC

How do I manually turn off/on voice guidance on the Jabra speakerphone?

Voice guidance is turned on by default.

To manually turn off/on voice guidance, press and hold (8 seconds) the **End call** button.

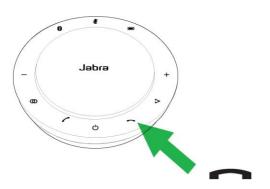



Applicable products

