

Jabra Elite 3 - Lilac

How do I use the call and music controls on my Jabra earbuds?

View the following table for information about the basic button controls on your Jabra earbuds.

Note

















The overview is in English only. For versions in other languages, refer to the translated user manual in the Product documents section on the product support page.



Left earbud	Function	Right earbud
Press the Left or Right button	Answer call	Press the Left or Right button
Double-press the Left or Right button	End/Reject call	Double-press the Left or Right button
Press the Left or Right button	Mute/unmute microphone	Press the Left or Right button
	Volume up	Press and hold the Right button
Press and hold the Left button	Volume down	

Left earbud	Function	Right earbud
	Play/pause music	Press the Right button when not on a call
	Volume up	Press and hold the Right button
Press and hold the Left button	Volume down	
	Next track	Double-press the Right button when listening to music
	Restart track or previous track	Triple-press the Right button when listening to music Repeat to skip to the previous track

Applicable products

 <p>Jabra Elite 4 - Dark Grey</p>	 <p>Jabra Elite 4 - Lilac</p>	 <p>Jabra Elite 4 - Light Beige</p>	 <p>Jabra Elite 4 - Navy</p>
 <p>Jabra Elite 5 - Black</p>	 <p>Jabra Elite 5 - Gold Beige</p>	 <p>Jabra Elite 4 Active - Navy</p>	 <p>Jabra Elite 4 Active - Black</p>
 <p>Jabra Elite 5 - Titanium Black</p>	 <p>Jabra Elite 3 - Light Beige</p>	 <p>Jabra Elite 4 Active - Mint</p>	 <p>Jabra Elite 3 Active</p>
 <p>Jabra Elite 3 - Dark Grey</p>	 <p>Jabra Elite 3 - Lilac</p>	 <p>Jabra Connect 5t - Titanium Black</p>	 <p>Jabra Elite 3 - Navy</p>