

# Jabra Elite 7 Active - Black

## How do I manually reset my Jabra earbuds to the default settings?

When you reset your earbuds, previously paired devices and settings will be cleared.

Follow these steps to reset.

1. Place both earbuds in the charging case and leave the lid open. Ensure your earbuds are sufficiently charged.
2. Press and hold (10 seconds) the **Left** and **Right** buttons on the earbuds simultaneously until the earbud LEDs flash pink.
3. Close the lid of the charging case (5 seconds) to complete the reset.

### **Note**

You cannot reset only one of the earbuds.

The earbuds will need to be re-paired to your mobile device. Remember to delete/forget the pairing in the Bluetooth menu on your mobile device.