

# Jabra Engage 55 - USB-A UC Mono with Charging Stand

 
I pressed and held the Jabra Link 400 button while connecting it to the USB port and now the headset is not reconnecting. What should I do?

The Link 400 has inadvertently been reset. You will need to re-pair the headset with the Link 400.

To manually pair an Engage headset with the Link 400, use either wireless pairing or cabled pairing. If there are other headsets in the area, and there is a risk of accidentally pairing with another headset, we recommend using cabled pairing.

## Wireless pairing

1. Plug the Link 400 into a USB port on the computer.
2. Turn off the headset (press and hold the **Call** button until the LED flashes red and the headset turns off).
3. Press and hold the **Call** button on the headset until the LED flashes blue.

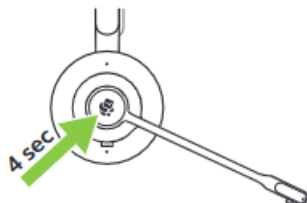


4. Press and hold (1-2 seconds) the button on the Link 400 to pair it with the headset.



## Cabled pairing

 This process is done using Jabra Direct.

1. Plug the Link 400 into a USB port on the computer.
2. Go to Jabra Direct > Pairing > Cabled pairing, and click **Pair**.
3. Follow the onscreen instructions.
4. When your headset appears under **Available headsets**, click **Pair**.

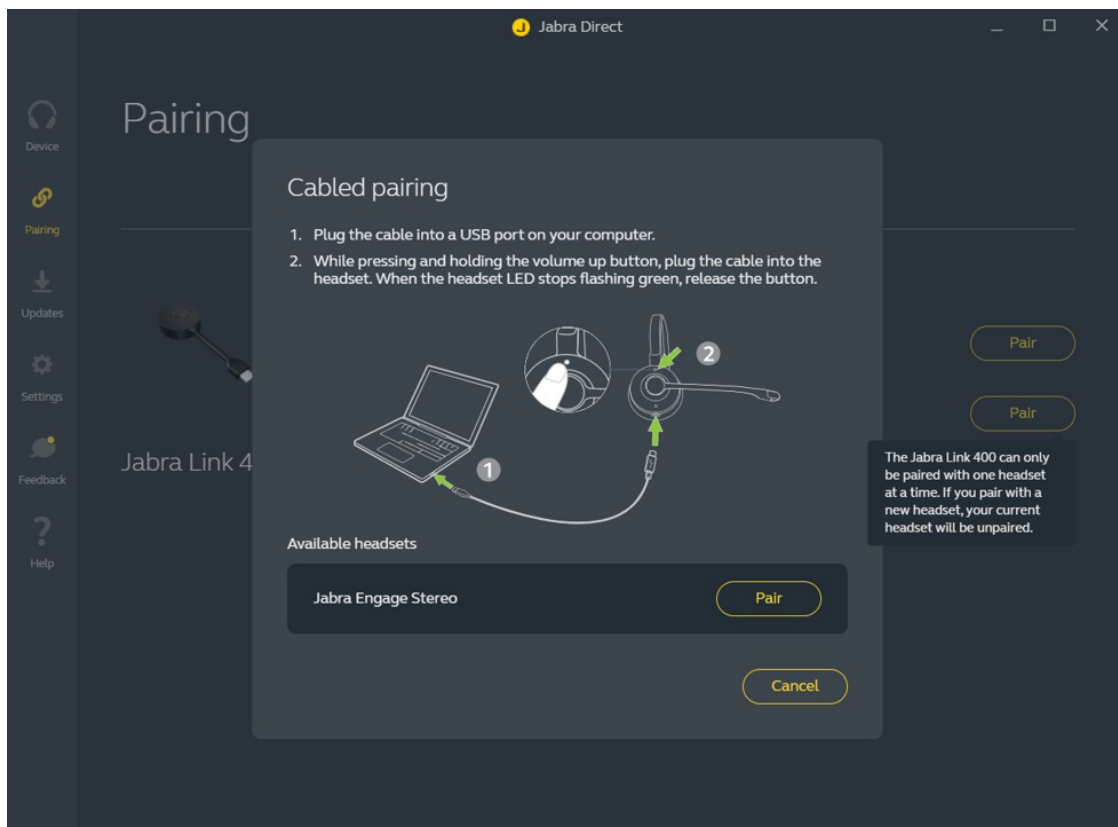

5. When pairing is complete, click **OK** and disconnect the cable.

## Applicable products



Jabra Link 400a USB-A, DECT, MS, NA



Jabra Link 400c USB-C, DECT, MS, NA



Jabra Link 400c USB-C, DECT, UC, NA



Jabra Link 400a USB-A, DECT, UC, NA



Jabra Engage 55 - USB-A UC Mono



Jabra Engage 55 - USB-A UC Mono with



Jabra Engage 55 - USB-C UC Mono



Jabra Engage 55 - USB-C UC Mono with



Jabra Engage 55 - USB-A MS Mono



Jabra Engage 55 - USB-A MS Mono with



Jabra Engage 55 - USB-C MS Mono



Jabra Engage 55 - USB-C UC Convertible



Jabra Engage 55 - USB-A UC Stereo with



Jabra Engage 55 - USB-C UC Stereo with



Jabra Engage 55 - USB-A MS Stereo



Jabra Engage 55 - USB-C MS Stereo with



**Jabra Engage 55 -  
USB-A UC**



**Jabra Engage 55 -  
USB-A UC Stereo**



**Jabra Engage 55 -  
USB-A MS Stereo**



**Jabra Engage 55 -  
USB-C MS**



**Jabra Engage 55 -  
USB-A MS**



**Jabra Engage 55 -  
USB-C MS Stereo**



**Jabra Engage 55 -  
USB-C MS Mono with**



**Jabra Engage 55 -  
USB-C UC Stereo**



**Jabra Engage 55 SE -  
USB-A UC Mono**



**Jabra Engage 55 SE -  
USB-A UC Mono**



**Jabra Engage 55 SE -  
USB-C UC Mono**



**Jabra Engage 55 SE -  
USB-C UC Mono**



**Jabra Engage 55 SE -  
USB-A MS Mono**



**Jabra Engage 55 SE -  
USB-A MS Mono**



**Jabra Engage 55 SE -  
USB-C MS Mono**



**Jabra Engage 55 SE -  
USB-C MS Mono**



**Jabra Engage 55 SE -  
USB-A UC**



**Jabra Engage 55 SE -  
USB-A UC Stereo**



**Jabra Engage 55 SE -  
USB-A MS Stereo**

**Jabra Engage 55 SE -  
USB-C UC Convertible**



**Jabra Engage 55 SE -  
USB-A UC Stereo**



**Jabra Engage 55 SE -  
USB-A MS Stereo**

**Jabra Engage 55 SE -  
USB-A MS**



**Jabra Engage 55 SE -  
USB-C UC Stereo**



**Jabra Engage 55 SE -  
USB-C MS Stereo**

**Jabra Engage 55 SE -  
USB-C MS**



**Jabra Engage 55 SE -  
USB-C UC Stereo**



**Jabra Engage 55 SE -  
USB-C MS Stereo**