

Jabra Link 14201-10

How to connect my Jabra GN9330e with Aastra 6753i, 6755i, 6757i

Prerequisite:

Jabra GN9330e + Jabra Link 14201-10 + Aastra DHSG Cable Kit (only available from Aastra)

In combination with one of the following phones:


- Aastra 53i / 55i / 57i / 57iCT
- Aastra 6753i / 6755i / 6757i / 6757i CT

From phone firmware 2.5.1.2000 or higher.

Connection:

Important: Please note that remote call control for the Jabra GN9330e is supported from version "L" or the Date code 9/09.

Aastra DHSG cable:

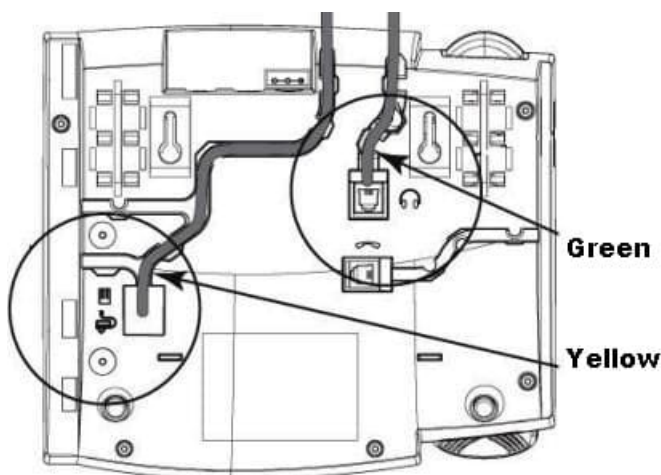


1. Insert the split end of the Aastra DHSG cable into your phone as

follows. The RJ10 plug (marked green) into the “headset” socket and the RJ45 plug (marked yellow) into the socket for the expansion module/ expansion modules.

2. Plug the 1-sided end of the Aastra DHSG cable marked in blue into the RJ45 adapter.

GN Netcom DHSG cable:

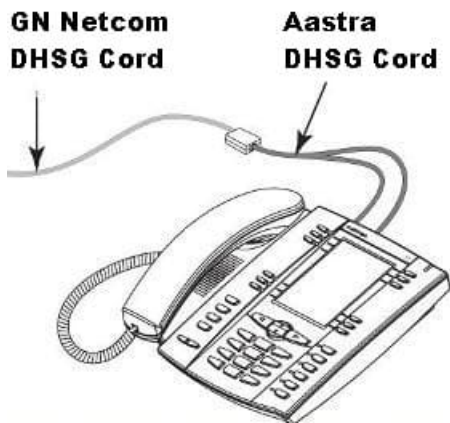

1. Now plug the 1-sided of the GN Netcom DHSG cable marked in blue into the free socket of the RJ45 adapter.
2. Plug the RJ10 plug into the socket marked with a “phone” symbol and the RJ45 plug into the base socket of the Jabra GN9330e marked with "AUX".

Software setup:

Put the headset into the base and activate the “DHSG” mode.

Hold down the “phone” button on the base of the Jabra GN9330e for approx. 6 seconds until the online display (blue LED) on the headset starts to flash. The current software is displayed to you by activating the volume controller in the form of the charge display (green LED).

LEDs from left to right:

LED 1 = RHL

LED 2 = DHSG


LED 3 = AEI

LED 4 = MSH

Thereafter, you can switch into the different software modes (LED 1-4) with the “volume” controller on the headset. To confirm the software has successfully installed, the base automatically switches back to charge mode after approx. 15 seconds.

Base setup:

Set the phone setup switch (A-G) to "A".

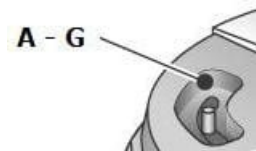

Phone setup:

In version 2.5.1.2000 the DHSG mode is disabled by default and must be activated via the Aastra.cfg or mac.cfg with the command dhsg:1.

From version 2.5.2 Options> Preferences> Audio Settings> DHSG > On

The audio mode must be set to "Headset/Speaker" in the phone settings:
Options > Preferences > Audio Settings > Audio Mode >
Headset/Speaker.

Remote call control in combination with an expansion keypad is not supported!

Headset answer/end:

As soon as the dial tone signal can be heard in the headset, you can answer the call by pressing the "answer/end" button on the headset; by pressing again the call is ended.

