


Jabra Pro 9450 Mono Flex

How do I manually reset my Jabra Pro 9450 to the default settings using the base?


When you reset your Jabra Pro 9450 to the default settings, the previous settings will be cleared.

To reset using the base, follow these steps:

1. Dock the charged headset in the base.
2. Center-press the **Microphone volume** switch on the base to enter setup mode. The mute indicator will blink slowly to indicate setup mode.

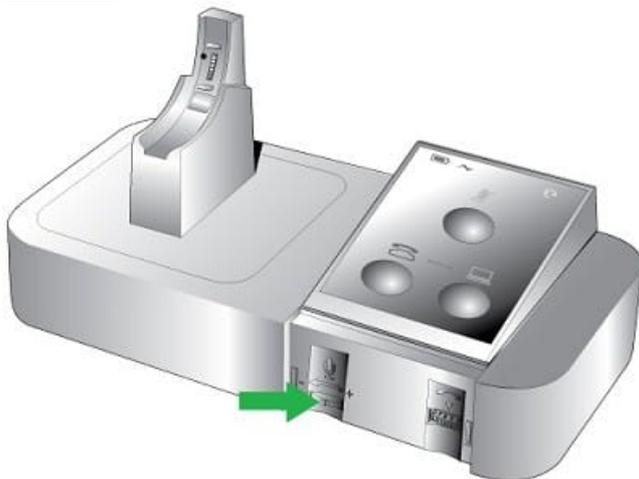

3. Simultaneously press and hold (5 seconds) the **Desk phone** button and the **Softphone** button.
After resetting, the base will restart.

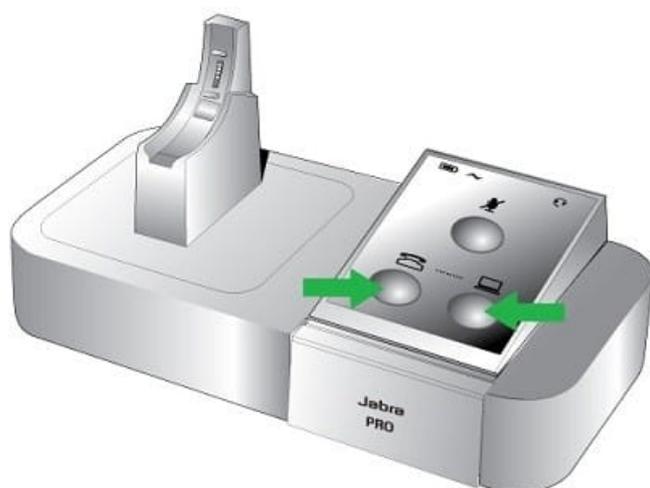**Note:**

If password protection has been set up for your Jabra Pro 9450 and base, you cannot reset the configuration to the default settings, because you cannot enter the setup for the base.