

 
Jabra Pro 9460 Mono

How do I reset my Jabra headset to the default settings using the touchscreen?


When you reset your Jabra headset to the default settings, the previous settings will be deleted.

To reset, follow these steps:


1. Tap the **Settings** icon.

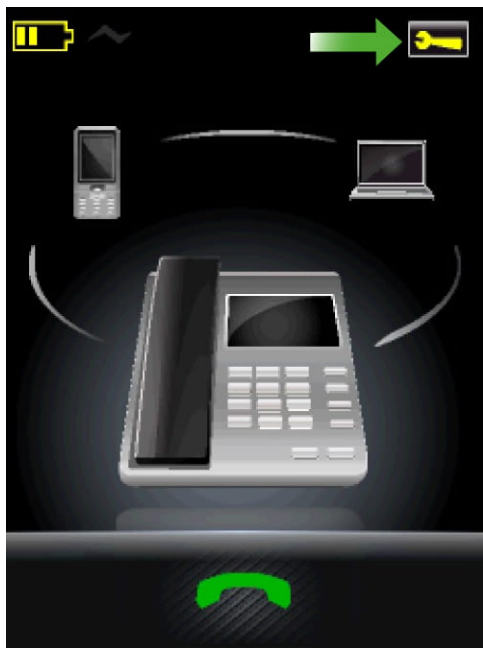


2. Tap **Phone settings**.

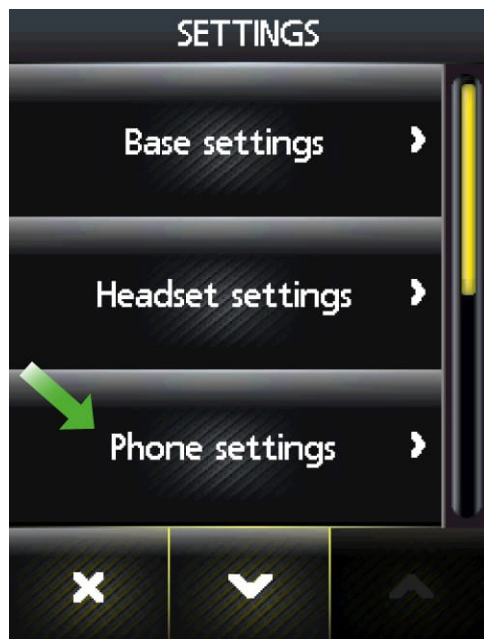

 3. Tap **Reset configuration**.

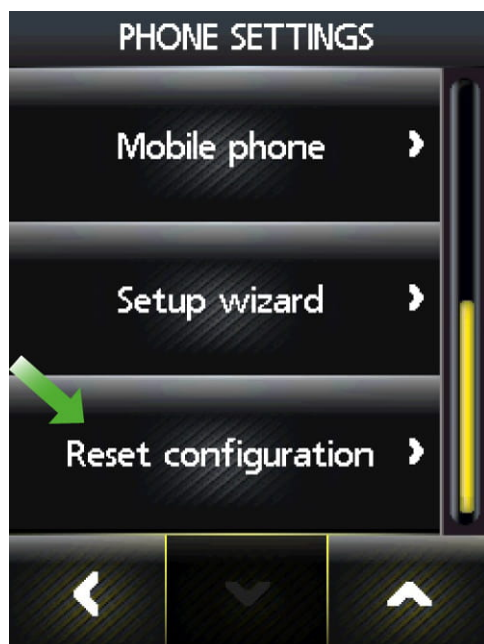

 4. Tap **Confirm**.

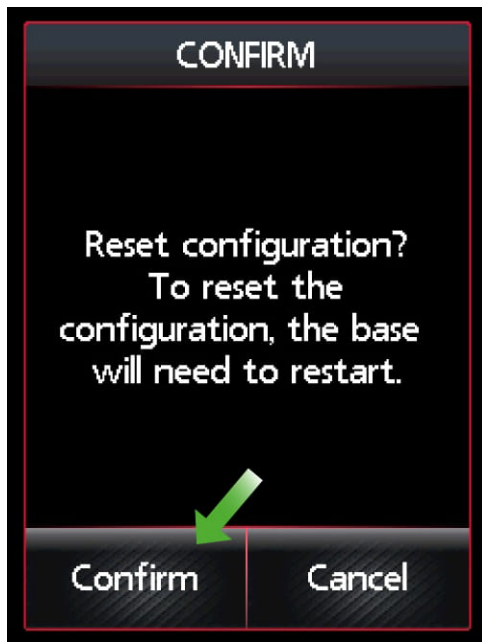

Applicable products



Jabra Motion Office



Jabra Motion Office
MS



Jabra Go 6470



Jabra Pro 9465 Duo



Jabra Pro 9460 Duo



Jabra Pro 9460 Mono



Jabra Pro 9470 Mono