


Jabra Clipper Black

How do I reset my Jabra Clipper?

When you reset your Jabra Clipper, the list of devices that have been paired with it is cleared. Follow these steps to reset:

1. Turn on your Jabra Clipper by pressing the **Multi-function** button until the LED flashes green.
2. Press the **Volume** buttons in the following sequence: -+--+-.+

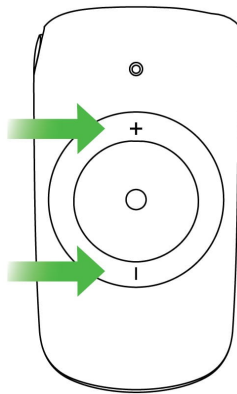

3. Turn off your Jabra Clipper by pressing the **Multi-function** button until the LED flashes red.
4. Your Jabra Clipper is now reset. When you turn it on again, it will go into pairing mode.
5. Turn on Bluetooth on your mobile phone, and then select the Jabra Clipper. Enter "0000" (four zeros) if you are asked for a pin code.

Note: When your Jabra Clipper has been reset, you will need to re-pair it with your mobile phone. Remember to delete the previous pairing before you re-pair.