

Jabra GN2125 Duo, Noise Canceling

How do I change the wearing style on my corded headset?

To change the wearing style on your Jabra corded headset, try the following recommendations:

For a flexible earhook style:

- To attach, hold the earhook in one hand and the receiver/speaker in the other. Gently press the receiver/speaker into the earhook ring.
- To detach, place both thumbs against the upper section of the receiver/speaker. Then gently push on the receiver/speaker to separate the speaker section from the earhook.

For a flexible earloop style:

- To attach, hold the earloop in one hand and the receiver/speaker in the other. Gently press the receiver/speaker into the earloop ring.
- To detach, place both thumbs against the upper section of the receiver/speaker. Then gently push on the receiver/speaker to separate the speaker section from the earloop ring.

For a headband style:

- To attach, hold the headband in one hand and the receiver/speaker in the other. Gently press the receiver/speaker into the headband ring.
- To detach, place both thumbs against the upper section of the receiver/speaker. Then gently push on the receiver/speaker to separate the speaker section from the headband.

For a neckband style (if available):

- To attach, hold the neckband in one hand, and the receiver/speaker in the other. Gently press the receiver/speaker in the neckband ring.
- To detach, place both thumbs against the upper section of the receiver/speaker. Then gently push on the receiver/speaker to separate the speaker section from the neckband.

Applicable products



**Jabra Biz 2400, 3-in-1,
WB Balance**



**Jabra Biz 2400 Mono,
3-in-1, Noise**



**Jabra GN2100 4-in-1,
Noise Canceling, STD**



**Jabra GN2100 3-in-1,
Soundtube**



**Jabra GN2100
Telecoil**



**Jabra GN2110 Mono,
Soundtube**



**Jabra GN2115 Duo,
Soundtube**



**Jabra GN2117 Mono,
Surefit, Soundtube**



**Jabra GN2120
Headband, Noise**



**Jabra GN2125 Duo,
Noise Canceling**