

Muting a call

- To **mute** the handset, press the 'mute' button. 'Mute_on' will appear in the display.
- To **unmute** the handset, press the 'mute' button again. You can resume the conversation instantly.



Warning

The enclosed magnet is for attaching the handset to, for example, a wall, a desk or a monitor. Do not leave the magnet close to any hard disk as this can result in damage and data loss.

Deleting a digit

- To delete a dialed digit press the 'C' button



This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

Jabra

Jabra DIAL™ 520 OC

A BRAND BY
GN Netcom

© 2009 GN Netcom A/S. All rights reserved. Jabra® is a registered trademark of GN Netcom A/S. All other trademarks included herein are the property of their respective owners.

MADE IN KOREA
TYPE: DIAL 520




www.jabra.com

81-02865 Rev C

Quick start manual

www.jabra.com

Overview of buttons

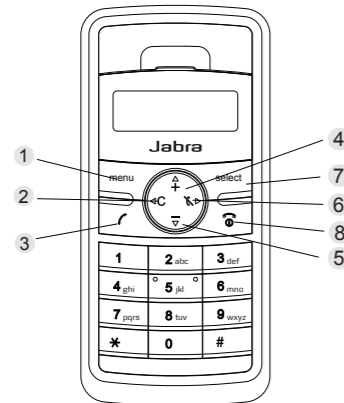


- 1 Menu button
- 2 Delete button
Press 'C' to delete the last dialed digit
- 3 Call button
- 4 Volume up
Press '+' to increase the volume
- 5 Volume down
Press '-' to decrease the volume
- 6 Mute button
- 7 Select button
- 8 End call button
-can also be used as an escape button

Before first time use

- Connect the Jabra DIAL 520 OC to the USB port on your computer.
- The product will install automatically as 'Jabra DIAL 520 OC' in Windows.
- Once installed, the handset is ready for use.


Answering a call

- When the display light flashes, press the 'call button'.

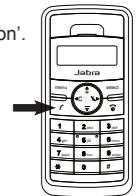

Making a call

- Key in the digits. The numbers will appear in the display.
- Press the 'call' button
- There is a ringing tone

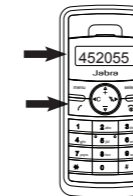

Terminating a call

- Press the 'end call' button.

