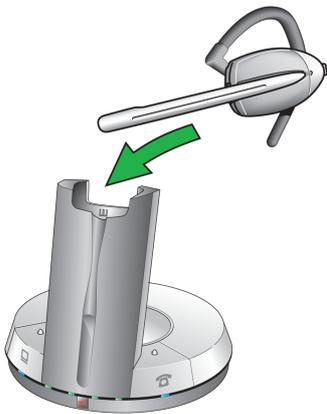# Jabra GN9330e With GN1000 Remote Handset Lifter

How do I change the wireless range on the Jabra GN9330e and Jabra GN9330e USB?

To change the wireless range settings, follow these steps:

1. Place your Jabra headset on the base.

2. Press the **Phone** button on the GN 9330e, or the **PC** button on the GN9330e USB, for approximately 6 seconds until the online display (blue LED) on the headset starts to flash.

3. Press the **Phone** button to set the range of your headset. You can view the current setting in the charge display (yellow LED). The settings indicate the following ranges:

   - Normal = up to 120m
   - Low = up to 60m
   - Very Low = up to 25m

GN9330e:

Audiomode	☐ ☐ ☐ ☐
NarrowBand \ Normal	☐ ■ ☐ ☐
NarrowBand \ Low	☐ ☐ ■ ☐
NarrowBand \ Very Low	☐ ☐ ☐ ■

GN9330e USB:

With the Jabra GN9330e USB, you can also select the bandwidth range settings, from narrowband (300Hz -3400 Hz) to wideband (150Hz-6800Hz).

Audiomode \ PowerLevel	☐ ☐ ☐ ☐
WideBand \ Normal	■ ■ ☐ ☐
NarrowBand \ Normal	☐ ■ ☐ ☐
WideBand \ Low	■ ☐ ■ ☐
NarrowBand \ Low	☐ ☐ ■ ☐
WideBand \ Very Low	■ ☐ ☐ ■
NarrowBand \ Very Low	☐ ☐ ☐ ■