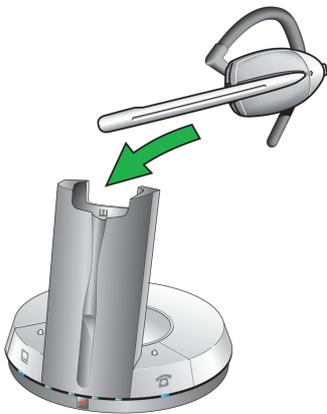# Jabra GN9330e USB MS

How do I change the wireless range on the Jabra GN9330e and Jabra GN9330e USB?

To change the wireless range settings, follow these steps:

1. Place your Jabra headset on the base.

2. Press the **Phone** button on the GN 9330e, or the **PC** button on the GN9330e USB, for approximately 6 seconds until the online display (blue LED) on the headset starts to flash.
3. Press the **Phone** button to set the range of your headset. You can view the current setting in the charge display (yellow LED). The settings indicate the following ranges:

   - Normal = up to 120m
   - Low = up to 60m
   - Very Low = up to 25m

GN9330e:

Audiomode	□ □ □ □
NarrowBand \ Normal	□ ■ □ □
NarrowBand \ Low	□ □ ■ □
NarrowBand \ Very Low	□ □ □ ■

GN9330e USB:

With the Jabra GN9330e USB, you can also select the bandwidth range settings, from narrowband (300Hz -3400 Hz) to wideband (150Hz-6800Hz).

Audiomode \ PowerLevel	□ □ □ □
WideBand \ Normal	■ ■ □ □
NarrowBand \ Normal	□ ■ □ □
WideBand \ Low	■ □ ■ □
NarrowBand \ Low	□ □ ■ □
WideBand \ Very Low	■ □ □ ■
NarrowBand \ Very Low	□ □ □ ■