

Headband Replacement Guide

Jabra Evolve3 75

Disclaimer

This guide provides instructions for disassembling and replacing the headband cushion component of your headset. The headband cushion is available for purchase from November 1, 2026.



Say hello to a more sustainable product

IT products are associated with a wide range of sustainability risks throughout their life cycle. Human rights violations are common in the factories. Harmful substances are used both in products and their manufacture. Products can often have a short lifespan because of poor ergonomics, low quality and when they are not able to be repaired or upgraded.

This product is a better choice. It meets all the criteria in TCO Certified, the world's most comprehensive sustainability certification for IT products. Thank you for making a responsible product choice, that help drive progress towards a more sustainable future!

Criteria in TCO Certified have a life-cycle perspective and balance environmental and social responsibility. Conformity is verified by independent and approved verifiers that specialize in IT products, social responsibility or other sustainability issues. Verification is done both before and after the certificate is issued, covering the entire validity period. The process also includes ensuring that corrective actions are implemented in all cases of factory non-conformities. And last but not least, to make sure that the certification and independent verification is accurate, both TCO Certified and the verifiers are reviewed regularly.

Want to know more?

Read information about TCO Certified, full criteria documents, news and updates at tco-certified.com. On the website you'll also find our Product Finder, which presents a complete, searchable listing of certified products.

Equipment



1x replacement
headband padding




1x spudger


Ensure you have the replacement part before starting disassembly.

Detach headband padding


1. Ensure your headset is powered off and not connected to a charger.

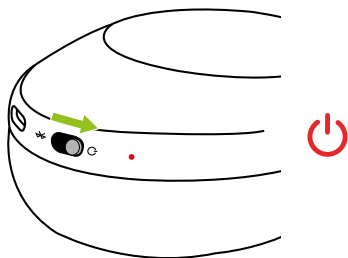


2. Insert the flat tip of the spudger between the headband and the headband padding .

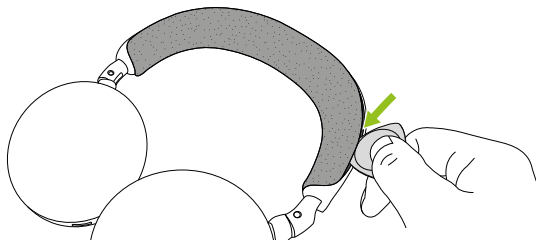

3. Use the spudger to pry the headband padding away from the headband. Move the spudger along the headband at regular intervals.

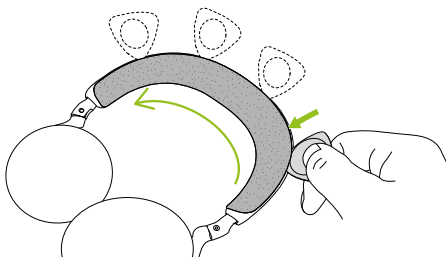

4. When one side of the headband padding has been separated, grip the headband padding tightly at one end and pull the headband padding away from the headband.

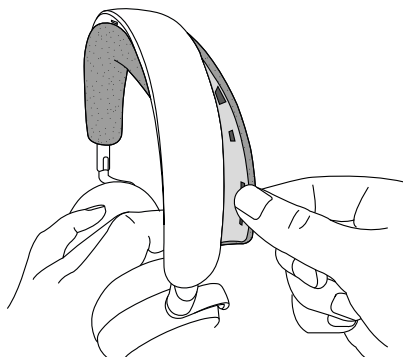

Attach headband padding

Align and push the headband padding into the headband until the clips are secure and there are no gaps.

