

new balance
PACEIQ
sound by **Jabra** GN



Jabra GN

User manual

© 2016 GN Audio A/S (GN Netcom A/S). All rights reserved. Jabra® is a trademark of GN Audio A/S. The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by GN Audio A/S is under license.

Made in China
Model: OTE24



Declaration of Conformity can be found on
www.jabra.com/CP/US/declarations-of-conformity

1. Welcome.....	4
2. Headphones overview.....	5
2.1 Included accessories	
3. How to wear.....	7
3.1 Changing Eargels	
3.2 Using the FitClip	
3.3 How-to-wear video	
4. How to charge.....	9
4.1 Charging the headphones	
4.2 What the LEDs mean	
5. How to pair.....	11
5.1 Pair to a RunIQ smartwatch	
5.2 Pair to a smartphone	
6. How to use	13
6.1 Calls & music	
6.2 Workout	
6.3 Multiple call handling	
6.4 Voice guidance	
6.5 How to reset	
6.6 How to firmware update	
7. Support.....	20
7.1 FAQ	
7.2 How to care for your headphones	
8. Technical specifications	21


1. Welcome

Thank you for using the New Balance PacerIQ Wireless. We hope you will enjoy it!

New Balance PacerIQ Wireless features

- Premium quality wireless sound & calls:
Up to 5 hours play time with easy transition from music to making and receiving calls.
- On-demand real time feedback from RunIQ, a smartwatch from New Balance - the dedicated Sports button gives you in-ear RunIQ performance updates from your smartwatch.
- Rapid charge: 15 minutes charging provides you with 60 minutes of battery life.
- Perfect and secure fit: Incredibly light, comfortable and secure headphones that lock in and won't fall out.
- Sweat and weather resistant: Work out in any weather with headphones tested to US Military Standards for weather and shock.

2. Headphones overview

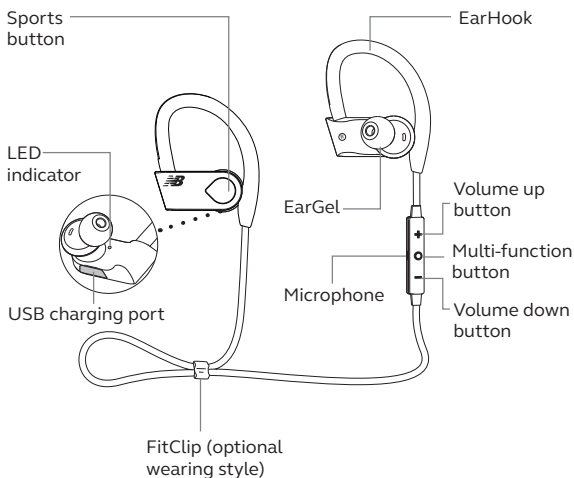

2.1 Included accessories



Large
EarGels



Medium
EarGels



Small
EarGels




FitClip



Micro-USB cable

Replacement or additional accessories can be purchased online at: jabra.com/accessories

3. How to wear

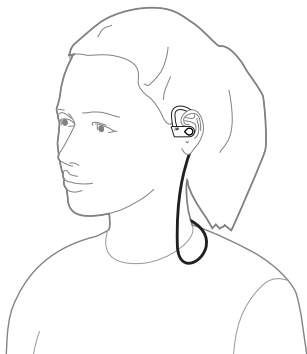

3.1 Changing EarGels

For the optimal audio experience, try each of the different EarGel sizes. The fit should feel tight and secure in your ear.





Large



Medium




Small

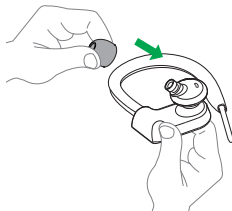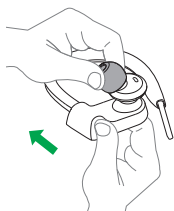

3.2 Using the FitClip

Attach the FitClip to the cable, and adjust for optimal fit.

Regular FitClip style

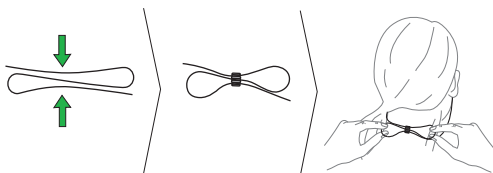

Simple FitClip style




3.3 How-to-wear video

You can watch the how-to-wear video at:
jabra.com/supportpages/paceiq

4. How to charge

4.1 Charging the headphones


Pull back the charging cover on the left headphone to expose the USB charging port. Plug any USB cable or charger into the USB charging port and connect to power to begin charging.

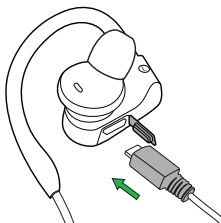

It takes approx. 2 hours to fully charge the headphones. If out of battery, rapid charge the headphones for 15 minutes to get 1 hour of music/talk time.

NOTE: When charging the headphones using a PC, ensure the PC supports USB charging.

4.2 What the LEDs mean

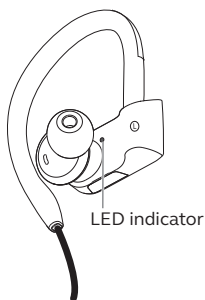

Left earbud

- High battery
- Medium battery
- Low battery
- Pairing mode or Earbuds connected
- Firmware update

5. How to pair

The first time the New Balance PacerIQ Wireless is turned on, it will automatically be ready to pair to a RunIQ smartwatch, or a smartphone that has Bluetooth enabled.


5.1 Pair to a RunIQ smartwatch

1. Turn off the headphones.
2. Press and hold (5 secs) the **Multi-function** button on the controller until the LED indicator on the left earbud flashes green and then blue. Release the button.
3. On the RunIQ smartwatch, go to Settings > Bluetooth > Devices > Scan for nearby devices. Select PacerIQ and wait for the devices to connect.




5.2 Pair to a smartphone


1. Turn off the headphones.
2. Press and hold (5 secs) the **Multi-function** button on the controller until the LED indicator on the left earbud flashes green and then blue. Release the button.
3. Follow the voice-guided instructions to connect to your smartphone.

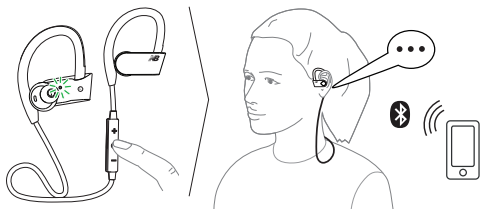

6. How to use

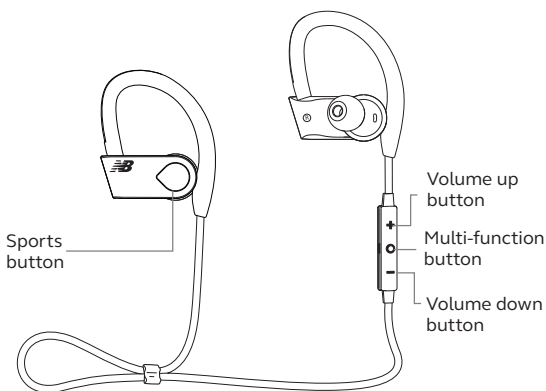

6.1 Calls & music

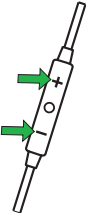
		Function	Action
	Turn on/off		Press and hold (3 sec) the Multi-function button until the LED indicator flashes
	Play/pause music		Tap the Multi-function button
	Answer/end call		Tap the Multi-function button
	Reject call		Double-tap the Multi-function button
	Redial last number		When not on a call, double-tap the Multi-function button
	Siri or Google Now		When not on a call or playing music, press and hold (2 sec) the Multi-function button until you hear two beeps
	Adjust volume		Tap the Volume up or Volume down button
	Mute		Tap both the Volume up and Volume down button at the same time
	Skip track		Press and hold (2 secs) the Volume up or Volume down button
	Battery status		Tap the Volume up or Volume down button when not on a call or listening to music

6.2 Workout

When the headphones are used with the RunIQ smartwatch, you can listen to on-the-go workout updates by using the **Sports** button on the left earbud.

The Sports button only works if the headphones are connected with the RunIQ smartwatch in a workout mode.

During workout

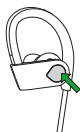

Listen to on-the-go updates*

Tap the **Sports** button

Disable/enable automatic audio notifications for the current session**

Double-tap the **Sports** button

* On-the-go updates are voice readouts (e.g. time, distance, pace, heartrate) which are played when the Sports button is tapped.

** Automatic audio notifications are voice readouts (e.g. time, distance, pace, heartrate) which are played automatically for the current session.

6.3 Multiple call handling

The headphones can handle multiple calls at the same time.

Function	Action
End current call and answer incoming call	Tap the Multi-function button
Switch between held call and active call	Press and hold (2 secs) the Multi-function button
Put current call on hold and answer incoming call	Press and hold (2 secs) the Multi-function button
Reject incoming call, when on a call	Double-tap the Multi-function button




6.4 Voice guidance

Voice guidance are voice announcements in your headphones intended to guide you, or give headset status updates (eg. connection and battery status).

Voice guidance is on by default. To turn voice guidance on or off, follow these steps:

1. Turn off the headphones.
2. Simultaneously press and hold (2 secs) the **Multi-function** button and the **Sports** button until 'Sound prompts on' or 'Sound prompts off' is announced.

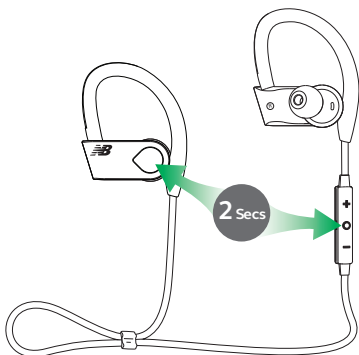


6.5 How to reset

Resetting the headphones clears the list of paired devices. After resetting, it is necessary to re-pair the headphones to your device.

To reset, follow these steps:

1. Turn on the headphones.
2. Simultaneously press and hold (5 secs) the **Multi-function** button and the **Sports** button until the LED indicator on the left earbud flashes green (or red if the headphones are low battery) and then flashes blue.
3. Follow the voice-guided instructions to re-pair the headphones to your RunIQ smartwatch or your smartphone. Remember to delete the previous pairing before you re-pair.

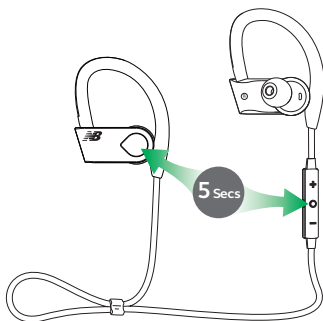

6.6 How to firmware update

Download the latest firmware for your headphones at: jabra.com/supportpages/paceiq

7. Support

7.1 FAQ

View the FAQs at: Jabra.com/supportpages/paceiq

7.2 How to care for your headphones

- Always store the headphones with the power off and safely protected.
- Avoid storage at extreme temperatures (above 65°C/149°F or below -40°C/-40°F). This can shorten battery life and may affect the headphones.

8. Technical specifications

New Balance PacerIQ Wireless	Specification
Weight:	21.61g (0.762oz)
Dimensions:	L 33.4mm x W 14.7mm x H 28.6mm (L 1.3 x W 0.58 x H 1.12 in)
Microphones type:	MEMS microphone
Speaker size:	12.4mm dynamic speaker
Operating range:	Up to 10m/33ft (phone/network dependent)
Bluetooth version:	4.1
Paired devices:	Up to 8, connected to two at the same time (MultiUse™)
Supported Bluetooth profiles:	A2DP (v1.2), Hands Free Profile (v1.6), Headset profile (v1.2), AVRCP (v1.5)
Talk/music time:	Up to 5 hours (phone/network dependent)
Standby time:	Up to 5 days (phone/network dependent)
Operating temperature:	-10°C to 55°C (14°F to 131°F)
Storage temperature:	-40°C to 65°C (-40°F to 149°F)
Pairing passkey or PIN:	0000

