

# Jabra GN9350e MS

## How to connect my Jabra GN9350e with Alcatel IP Touch 4028, 4038, 4068

### **Prerequisite :**

Jabra GN9350 + Jabra Link 14201-09

In combination with one of the following phones:

- IP Touch 4028
- IP Touch 4038
- IP Touch 4068


### **Connection:**

#### **2-sided end:**

Insert the RJ45 plug into the socket marked "AUX" and the RJ10 plug into the base socket of the Jabra GN9350 marked "phone".

#### **2-fold Y-coupling end:**

Insert the 3.5 mm audio jack into the headset interface and the RJ12 plug into the bell socket of the phone. The extra connector socket on the Y-coupling remains free for the connection to an IP phone!

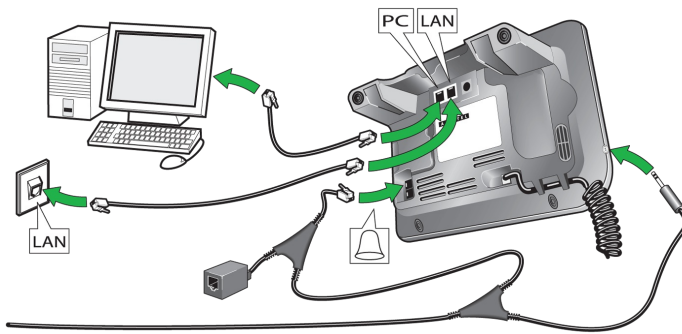


### Software setup:

In the LCD display, set the Jabra GN9350 to "MSH" and press the OK button.



### Base setup:

Set the phone setup switch (A-G) to the "A" position.

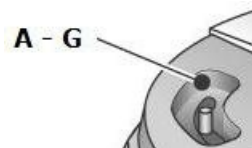

### Microphone level setup:

We recommend setting the microphone volume in the LCD display to 7 out of 12.



### Headset answer/end:

As soon as the dial tone signal can be heard in the headset, you can answer the call by pressing the "answer/end" button on the headset; by pressing again the call is ended.



### Phone setup with system software version 9.xx and higher:

No settings are required on the phone to use a headset. Following the correct adaptation of the audio jack, a headset symbol should appear in the "Phone display". If the headset symbol does not appear, please check the following settings:

Menu> Settings> Phone> Audio Jack> Select / Activate Headset.

### Phone setup with system software version below version 9.xx:

**Important:** The "Force Headset" function must not be activated on the phone, as otherwise it will not be possible to accept external calls!

Menu> Settings> Phone> Audio Jack> Force Headset OFF

Menu> Settings> Phone> Socket > Activate Headset

## Dial tone signal transfer/ phone setup:

**Important:** The dial tone signal in the headset is only transmitted if one of the following ringtones is used, e.g., Standard/ Classic / Cold River / Dooing-Dooing. > Menu> Settings> Dial Tone > Internal / External

Should the dial tone signal transfer not work although you have setup the correct ringtone, please check the following settings:

Menu > Settings > Phone > Internal/External, More Options

No sound, Progressive, Beeps> all points must be set to "OFF".

Calls being made via the headset can be connected / forwarded as follows:

Dial the phone number > "Forward" will now appear in the phone display > now press on the appropriate function key next to the phone display > thereafter you must end the call with the button marked "Handset".