

# Jabra Link 14201-10

## How to connect my Jabra Pro 92x with Aastra 6753i, 6755i, 6757i

### Prerequisite:

Jabra Pro 92x + Jabra Link 14201-10 + Aastra DHSB Cable Kit (only available from Aastra)

In combination with one of the following phones:


- Aastra 53i / 55i / 57i / 57iCT
- Aastra 6753i / 6755i / 6757i / 6757i CT

from phone firmware 2.5.1.2000 and higher

### Connection:

#### Aastra DHSB cable:


Insert the split end of the Aastra DHSB cable into your headset as follows.

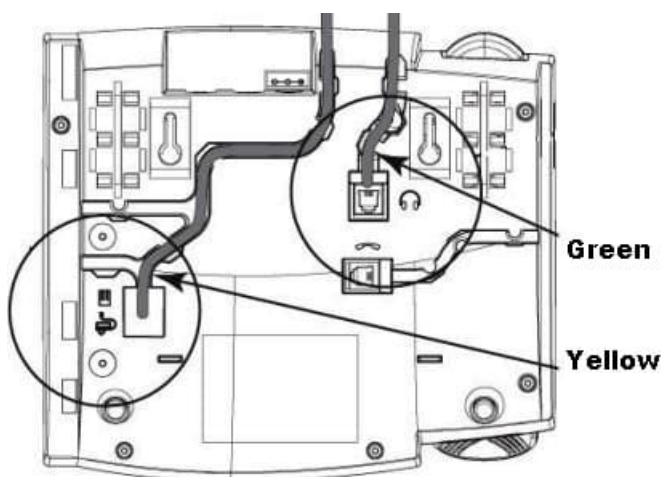

1. Insert the RJ10 plug (marked green) into the “headset” socket and the RJ45 plug (marked yellow) into the socket for the expansion module/ expansion modules.

2. Plug the 1-sided end of the Aastra DHSG cable marked in blue into the RJ45 adapter.

### GN Netcom DHSG cable:

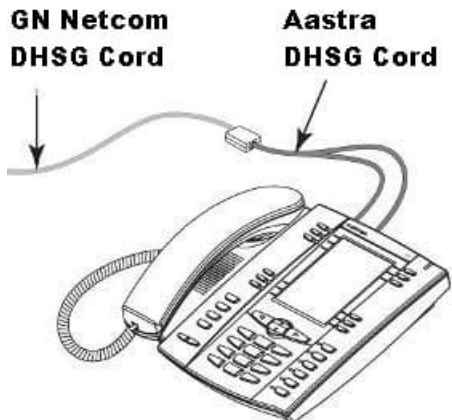

1. Now plug the 1-sided end of the GN Netcom DHSG-cable marked in blue into the RJ45 free socket of the RJ45 adapter.
2. Connect the split end of the DHSG cable with the Jabra Pro 92x base as follows. Plug the RJ10 plug into the socket marked with a complete “phone” symbol and the RJ45 plug into the base socket of the Jabra Pro 92x marked with "AUX".


Now you can setup the headset for your phone with the automatic or manual configuration.

### Automatic configuration:

To start the automatic configuration, please let someone call you on this phone; wait at least 10 seconds before you pick up the phone. Now the appropriate EHS mode should be set up.


If the automatic configuration did not work, please manually select the DHSG mode. (See Manual).

### Base setup:

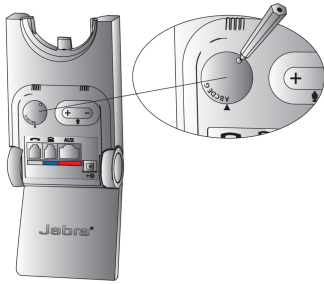

Set the phone setup switch to position "A".

### Microphone volume setting:

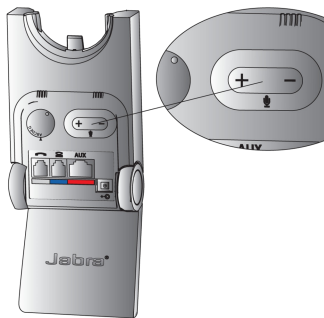

Put on the headset and call a colleague, for example.

Now you can select the desired microphone volume using the +/- button.

In version 2.5.1.2000 DHSG mode is disabled by default and must be activated via the Aastra.cfg or mac.cfg with the dhsg:1 command.

From version 2.5.2 Options> Preferences> Audio Settings> DHSG > On

The audio mode in the phone settings must be set to "Headphone/Speaker":

Options> Preferences> Audio Settings> Audio Mode> Heads. / Speaker.

Remote call control in combination with an expansion keypad is not supported.