Jabra Pro 9450 Mono

How to connect my Jabra Pro 9450 with Aastra 6753i, 6755i, 6757i
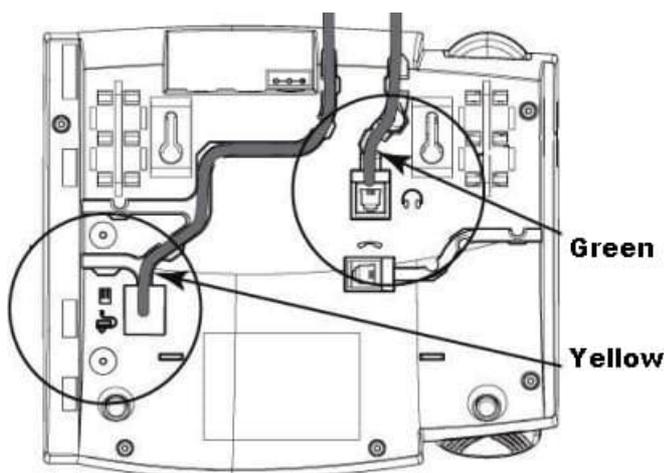
Prerequisite:

Jabra Pro 9450 + Jabra Link 14201-10 + Aastra DHSG cable kit (only available from Aastra)

In combination with one of the following phones:

- Aastra 53i / 55i / 57i / 57iCT
- Aastra 6753i / 6755i / 6757i / 6757i CT
- From phone firmware 2.5.1.2000 or higher.
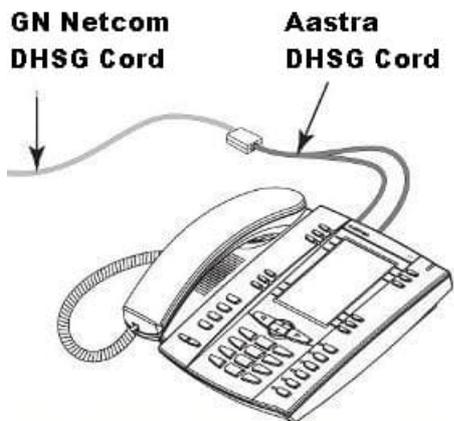
Connection:

Aastra DHSG cable:

1. Insert the split end of the Aastra DHSG cable into your phone as follows.
2. Insert the RJ10 plug (marked green) into the "headset" socket and the RJ45 plug (marked yellow) into the socket for the expansion

module.

3. Insert the 1-sided end of the Aastra cable marked in blue into the RJ45 adapter.

GN Netcom DHSG cable:

1. Now insert the 1-sided end of the GN Netcom DHSG cable marked in blue into the free socket of the RJ45 adapter.
2. Connect the split end of the DHSG cable as follows with the Jabra Pro 94x0e base. Insert the RJ10 plug into the socket identified with the complete "phone" symbol and the RJ45 plug into the socket identified with "AUX" on the Jabra Pro 94x0 base.

You now have the option of setting up the headset on your phone via the automatic or manual configuration.
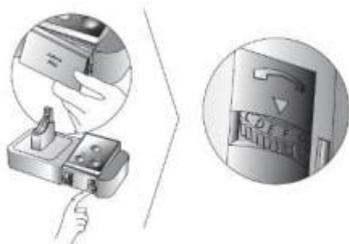
Automatic configuration:

To start the automatic configuration, have someone call you on this phone and wait at least 10 seconds before taking the call. The appropriate EHS mode should now be installed.

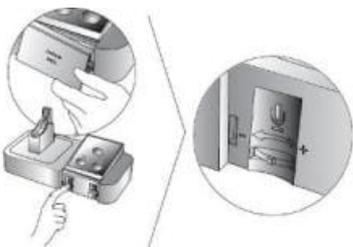If the automatic configuration has not worked, please select DHSG mode

manually.

Base setup:

Set the phone set-up switch to position "A".

Microphone level setup:

Remove the cover from the base of the Jabra Pro 9450 and make a call with the headset, to a colleague for example. If you are too loud or too quiet to the person you are calling, please use the volume adjuster until you achieve the optimum volume level.

Phone setup:

With the version 2.5.1.2000, the DHSG mode is deactivated by default and must be activated via the Aastra.cfg or mac.cfg with the command dhsg: 1.

From version 2.5.2 Options > Default settings > Audio settings > DHSG > On

Audio mode in the phone settings must be set to "Headset / Speaker":

Options > Default settings > Audio settings > Audio mode > Headset / Speaker

Remote call control in combination with an expansion keypad is not supported.