

Jabra Pro 9450 Duo

How to connect my Jabra Pro 9450 with Siemens Opti Point 410, 420, 500, 600

Prerequisite:

Jabra Pro 9450 + Jabra Link 14201-10 + Acoustic Adapter (only available from Siemens)

In combination with one of the following phones:

- Opti Point 410 standard / advance
- Opti Point 420 standard / advance
- Opti Point 500 basic / standard / advance
- Opti Point 600

+ Opti Point acoustic adapter:

- min. version number for: S30817-K7110-B508 -10
- min. version number for: S30817-K7110-N508 -1

+ HiPath phone system:

- HiPath 500 from V.5
- HiPath 1220 from V2.1 build 032
- HiPath 2000 from V1.0
- HiPath 3000 from V3 SMR 14
- HiPath 3000 from V4 SMR 7
- HiPath 4000 from V1

Important: If one of the components is missing the remote call control will not work.

Connection:


1. Plug the 1-sided end of the DHSG cable marked "blue" into the socket of the universal adapter marked with the "headset" symbol
2. Insert the RJ10 plug into the socket marked with the "phone" symbol and the RJ45 plug into the socket marked with "AUX" on the base

Manual configuration:

The appropriate EHS mode should now be installed, to do this select Siemens Optipoint mode as described.


Base setup:

Set the phone set-up switch to position "A".

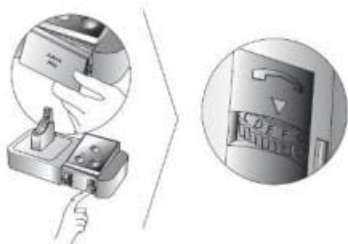

Microphone level setup:

Remove the cover from the base of the Jabra Pro 9450 and make a call with the headset, to a colleague for example. If you are too loud or too quiet to the person you are calling, press the volume adjuster until you achieve the optimum volume level.

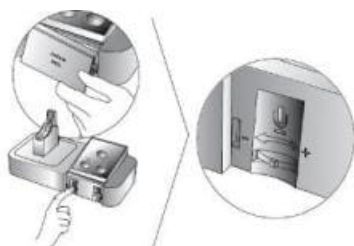

Phone setup:

Important: Once the headset has been connected and set, a reset must be implemented on the OptiPoint phone so that the EHS function is accepted.

An optional headset button can be set up via the phone menu (combination: *91 > Select button > Change button > Headset > OK).