

# Jabra Pro 9465 Duo

## How to connect my Jabra Pro 9400 / Go 6470 with Siemens Opti Point 410, 420, 500, 600

### Prerequisite:

Jabra Pro 9460 / Jabra Pro 9470 + Jabra Link 14201-10 + Acoustic Adapter

In combination with one of the following phones:

- Opti Point 410 standard / advance
- Opti Point 420 standard / advance
- Opti Point 500 basic / standard / advance
- Opti Point 600

+ Opti Point Acoustic Adapter:

- min. Version number for: S30817-K7110-B508 -10
- min. Version number for: S30817-K7110-N508 -1

+ HiPath phone system:

- HiPath 500 from V.5
- HiPath 1220 from V2.1 Build 032
- HiPath 2000 from V1.0
- HiPath 3000 from V3 SMR 14
- HiPath 3000 from V4 SMR 7
- HiPath 4000 from V1

**Important:** If any of the components are missing the Remote Call Control will not work.

### Connection:

1. Plug the 1-sided end of the DHSG cable marked in blue into the

socket of the OptiPoint Acoustic Adapter marked with the "headset" symbol.

2. Connect the split end of the DHSG cable with the Jabra Pro 9400 base as follows. Plug the RJ10 plug into the socket marked with a "phone" symbol and the RJ45 plug into the base socket marked with "AUX".

Then follow the instructions of the Jabra Pro 9400 base SmartSetup Wizard.



Select phone settings, "Desk phone", then "Connect to a desk phone?", "Manual".




Select adapter type "Siemens OptiPoint"

**Base setup:**



Set the phone setup switch to position "A".

### Microphone volume setting:

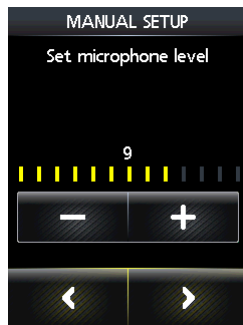

We recommend setting the microphone volume to 6 out of 13.

### Guided set-up:

As part of the installation you can dial into the local Jabra Setup server that takes care of configuring the audio path. Please follow the instructions shown on the display. If your Jabra Setup server is unavailable, please contact your local Jabra Support team.

### Phone setup:

**Important:** As soon as the headset is connected and set up, a reset must be performed on the OptiPoint, for the EHS function to activate.

An optional headset button can be installed in the phone menu

(combination: \*91>select button > change button > headset > OK).